

geemarc™ Liberty 200 / Duo

Fear the Difference

Amplified Cordless Telephone

With its small separate DECT base connected to your internet box, you have the Liberty to place your telephone anywhere in the house without the need for a wall telephone socket.



TABLE OF CONTENTS

| | |
|---|-----------|
| 1. IMPORTANT SAFETY INSTRUCTIONS | 1 |
| 2. SET UP THE TELEPHONE | 2 |
| 2.1 Package Contents..... | 2 |
| 2.2 Location..... | 2 |
| 2.3 Installation | 3 |
| 2.4 Connecting the Handset Battery..... | 4 |
| 3. FIRST TIME USING YOUR HANDSET | 4 |
| 4. GET TO KNOW YOUR PHONE | 5 |
| 4.1 Overview of the Handset, Handset Base Charger & DECT Base | 5 |
| 4.2 Handset LCD Display Icons and Symbols | 7 |
| 4.3 Handset Menu Structure | 8 |
| 4.4 Text and Digit Entry Table | 9 |
| 4.5 English Character Set | 9 |
| 5. USE YOUR PHONE | 10 |
| 5.1 Make an External Call | 10 |
| 5.2 Direct Dialing | 10 |
| 5.3 Call from the Phonebook..... | 10 |
| 5.4 Call from the Call Log (20 last numbers) | 10 |
| 5.5 Call from the Redial List (10 last numbers)..... | 10 |
| 5.6 Answer a Call..... | 10 |
| 5.7 BOOSTER Function..... | 10 |
| 5.8 Adjust Earpiece and Speakerphone Volume..... | 11 |
| 5.9 Call Timer..... | 11 |
| 5.10 End a Call | 11 |
| 5.11 Mute a Call..... | 11 |
| 5.12 Set the Handset Silent Mode..... | 12 |
| 5.13 Set the Handset Keypad Lock..... | 12 |
| 5.14 Find the Handset | 12 |
| 5.15 Redial the Last Number | 12 |
| 5.15.1 Redial a Number from the Redial List | 12 |
| 5.15.2 Store a Redial Number into the Phonebook | 12 |
| 5.15.3 Delete a Redial Number | 12 |
| 5.15.4 Delete the Entire Redial List | 12 |
| 5.16 Call transfer or 3-way conference functions..... | 13 |
| 5.16.1 Make an Internal Call..... | 13 |
| 5.16.2 Intercom | 13 |
| 5.16.3 Call All Handsets | 13 |
| 5.16.4 Transfer an External Call | 13 |
| 5.16.5 Make a 3-way Conference Call | 13 |
| 6. PHONEBOOK | 14 |
| 6.1 Adding a New Phonebook Entry..... | 14 |
| 6.2 Dial a Phonebook Entry..... | 14 |
| 6.3 Adding a contact in the VIP Phonebook | 14 |
| 6.4 Edit or View one contact in Phonebook | 14 |

| | | |
|------------|--|-----------|
| 6.5 | Deleting contacts from the Phonebook..... | 15 |
| 6.6 | Check the Phonebook Usage..... | 15 |
| 7. | CALL BLOCKER FUNCTION..... | 15 |
| 7.1 | Using the call block key..... | 15 |
| 7.2 | Adding a block listed phone number..... | 15 |
| 7.3 | Activating the black list function..... | 15 |
| 7.4 | Activating the function to block the private, international, payphone or unavailable numbers..... | 16 |
| 7.5 | Deleting one or all black listed numbers..... | 16 |
| 7.6 | Edit or view one black listed number..... | 16 |
| 8. | CALLER DISPLAY (NETWORK DEPENDENT) | 17 |
| 8.1 | View the Call List..... | 17 |
| 8.2 | Store a Call List Number into the Phonebook | 17 |
| 8.3 | Delete an Entry or the entire Call List | 18 |
| 8.4 | Choosing the type of list of received calls to display | 18 |
| 9. | PHONE SETTINGS | 19 |
| 9.1 | Alarm Settings | 19 |
| 9.2 | Turns ON/ OFF the alarm..... | 19 |
| 9.3 | Set the Ringer Melody for External Calls..... | 19 |
| 9.4 | Set the Ringer Melody for Internal Calls..... | 20 |
| 9.5 | Set the Ringer Volume..... | 20 |
| 9.6 | Set Alert Tones..... | 20 |
| 9.7 | Set the Language..... | 20 |
| 9.8 | Rename the Handset..... | 20 |
| 9.9 | Activate the Auto Answer function..... | 20 |
| 9.10 | Clock setting..... | 21 |
| | 9.10.1 Set the Date format | 21 |
| | 9.10.2 Set the Time format | 21 |
| | 9.10.3 Set the Date & Time | 21 |
| 9.11 | Set the Speed dial numbers..... | 21 |
| | 9.11.1 Add a speed dial number..... | 21 |
| 9.12 | Handset Base Charger | 22 |
| | 9.12.1 De-register a Handset..... | 22 |
| | 9.12.2 Set the Dial Mode | 22 |
| | 9.12.3 Set the Flash Time | 22 |
| | 9.12.4 Change the System PIN Code | 22 |
| | 9.12.5 Set the Eco mode | 22 |
| 10. | REGISTRATION..... | 23 |
| 11. | RESET YOUR PHONE..... | 23 |
| 12. | TROUBLESHOOTING | 24 |
| 13. | TECHNICAL SPECIFICATIONS..... | 26 |
| 14. | GUARANTEE | 27 |
| 15. | DECLARATIONS | 27 |

!!! Please refer to our website: www.geemarc.com for an up-to-date user guide, as there may be important updates and changes you need to be aware of !!!

CAUTION: Only use the batteries provided. There may be a risk of explosion if the wrong type of batteries are used for the handset. Do not subject the batteries to extreme high or low temperatures, or to low pressure at high altitude during use, storage, or transportation. Placing the batteries into the fire or in a hot oven, or mechanically crushing or cutting the batteries can result in an explosion. Subjecting the batteries to an extremely high temperature environment, or extremely low air pressure can result in an explosion, or a leakage of flammable liquid or gas.

Dispose of used batteries according to the instructions.

Normal operating temperature for the product (e.g. 0 °C ~ 40°C).

Use only the adapters and battery listed below.



Power adapter information: output: 6V DC 0.45A, 2.7W. Vtech Telecommunications Limited.

Model: A318-060045W-EU1 (EU), A318-060045W-UK1 (UK)



Rechargeable Battery: Model: NI-MH AAA x 2. 1.2V, 400mAh.

1. IMPORTANT SAFETY INSTRUCTIONS

To reduce risk of electric shock, injury and fire when using this telephone equipment, always follow the basic safety precautions listed below:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the mains electrical wall socket before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
6. Do not overload mains electrical wall sockets or extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the mains electrical wall socket and refer servicing to the distributor under

the following conditions:

- When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
 9. Do not use the telephone to report a gas leak in the vicinity of the leak.
 10. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the batteries supplied.
 11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or may damage the unit. The manufacturer will not be held liable for damage arising from such non-compliance.
 12. Do not use third party charging bays. The batteries may be damaged.
 13. The batteries should not be exposed to excessive heat such as bright sunshine or fire or immersed in water.
 14. Install pluggable equipment near to an easily accessible mains electrical wall socket.

Disposal warning

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products, including batteries should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old or unwanted electronic products, including power adapters and batteries will help prevent potential negative consequences for the environment and human health.



For more detailed information please contact your city office, waste disposal service or the shop from where you purchased the product.

2. SET UP THE TELEPHONE

2.1 PACKAGE CONTENTS

- 1 DECT Base
- 1 Cordless Handset (receiver)
- 1 Handset Base Charger (Charging cradle for charging the cordless handset)
- 2 Power Adapters (1 for the DECT Base, 1 for the Charger)
- 1 telephone line cord
- 2 1.2V/400mA NiMh batteries
- 1 Quick-Start User Guide

2.2 DECT Base Location


For best handset reception and coverage, and to reduce any interference, follow the guidelines below on where to locate the DECT Base.

- place the DECT base at a convenient height (e.g. on a table-top) and ideally at a central location with no obstructions between the DECT Base and handset, **in an indoor environment**.
- keep the DECT Base away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid locations where there are nearby radio frequency transmitters, such as mobile phone masts.
- to reduce the possibility of interference, avoid sharing the same mains electrical wall socket for DECT Base and other household electrical appliances. Try using a different mains electrical wall socket for the DECT Base or for the appliance.

Move the location of the DECT Base if the reception on the handset is not satisfactory.

The signal range between the DECT Base and handset maybe reduced due to surrounding conditions, distance and construction of the building.

2.3 Installation

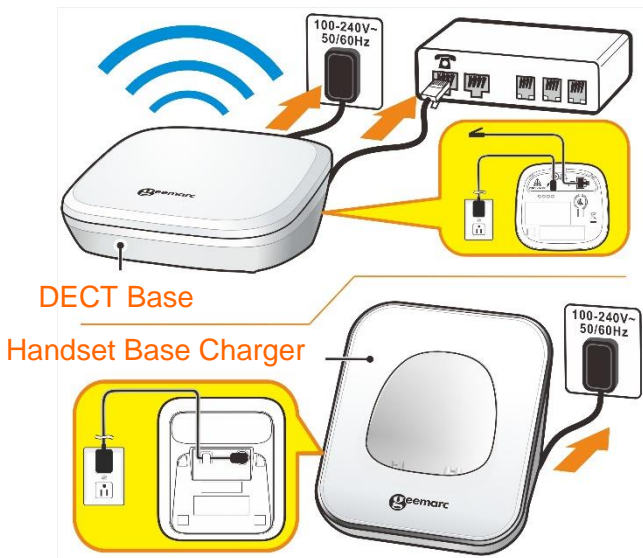


Connecting the telephone


DECT Base: Connect one end of the supplied telephone line cord to the telephone line socket on the bottom of the base unit (TEL. LINE), and the other end of the line cord to either your (PSTN) telephone wall socket, a DSL filter, or to the Analogue Telephone Adapter (ATA) socket on your router. Connect the cable from the power adapter to the bottom of the DECT base then plug in the power adapter to a mains electrical wall socket (ideally one that doesn't have a wall switch).

Handset Base Charger: Connect the cable from the power adapter to the bottom of the Charger, then plug in the power adapter to a mains electrical wall socket (ideally one that doesn't have a wall switch).

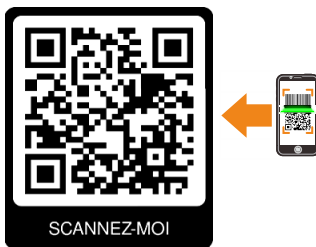

Note: Only use the power adapters supplied with the phone.



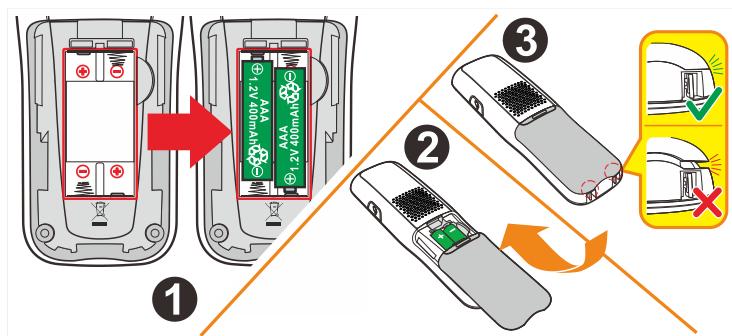

2.4 Fitting the handset batteries



Charge the batteries for at least 12 hours when charging them for the first time.
Use only the power adapters and battery listed below.

  Power adapter information: output: 6V DC 0.45A, 2.7W. Vtech Telecommunications Limited.
Model: A318-060045W-EU1 (EU), A318-060045W-UK1 (UK)

  Rechargeable Battery: Model: NI-MH AAA x 2. 1.2V, 400mAh.

3. FIRST TIME USING YOUR HANDSET

After fitting the batteries, you can select your language using the ▼▲ keys.

Press **MENU/OK** to confirm.

The display then reads "PLS SET TIME".

Press **MENU/OK** then with the ▼/▲ keys select "HS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "DATE & TIME". Press **MENU/OK**.

Press **MENU/OK** then with the ▼/▲ keys select "SET TIME".

Press **MENU/OK** then set the correct time (hours and minutes) using the keypad and confirm by pressing **MENU/OK**.

Enter the correct year using the keypad and confirm by pressing **MENU/OK**.

Enter the correct date using the keypad and confirm by pressing **MENU/OK**.

Note: If you receive a call and have subscribed to your provider's caller ID service, your phone will automatically set the correct date and time (but not the year).



4. GET TO KNOW YOUR PHONE

4.1 Overview of the Handset & base

DECT Base



Handset Base Charger

DECT Base



A- /HANDSET LOCATOR

In idle mode, press to make all the handsets ring.

Handset

1- EARPIECE

2. LCD DISPLAY

3. CHARGING INDICATOR LIGHT ()

ON when the handset is charging.

4. MENU/OK ()

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list / Call log.

5. UP/CALL LOG ()

In idle mode: Press to access the call log.

In main menu mode: Press to scroll up the menu items.

In the phonebook / redial list / call log: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

When ringing: Press to increase the ringer volume.


6. TALK ON ()

In idle / pre-dial mode: Press to make a call in earpiece mode.

In the phonebook / redial list / call log: Press to call a number stored in the phonebook in earpiece mode.

When ringing (incoming call): Press to answer a call in earpiece mode.

During a call: Press to answer another incoming call (if you have subscribed to a call waiting service from your network provider).

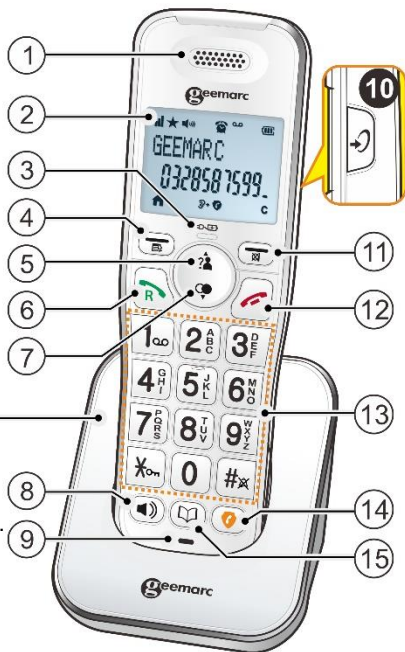

7. DOWN/REDIAL LIST ()

In idle mode: Press to access the redial list.

In main menu mode: Press to scroll down the menu items.

In the phonebook / redial list / call log: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

When ringing: Press to decrease the ringer volume.

8. SPEAKERPHONE ()

In idle/pre-dial mode: Press to make a call in speakerphone mode. Press again to switch to earpiece mode.

In the phonebook / redial list / call log: Press to call the selected number in speakerphone mode. Press again to switch to earpiece mode.

When ringing: Press to answer a call in speakerphone mode. Press again to switch to earpiece mode.

9. MICROPHONE

10. VOLUME BOOST ()

During a call: Press to turn on the VOLUME BOOST function. Press again to turn it off.

11. CANCEL/MUTE ()

In main menu mode: Press to go back to the idle screen.

In sub-menu mode: - Press to go back to the previous menu.

- Press and hold to go back to the idle screen.

In editing / recording a contact in the phonebook or blacklist / pre-dial mode:

- Press to delete a character /digit.

- Press and hold to delete all the characters / digits.

During a call: Press to mute / unmute the microphone.

In idle mode: Press to call another handset (intercom).

12. TALK OFF ()

During a call: Press to end a call and go back to the idle screen.

In main menu /editing mode: Press to go back to the previous menu.

In main menu / editing mode: Press and hold to go back to the idle screen.

When ringing: Press to mute the ringer.


In idle mode: Press and hold to power off the handset.

Press and hold to power on the handset when it is off.

13. ALPHANUMERIC KEYPAD, STAR (, HASH ()

In pre-dial or editing mode: Press to enter the  or  character.

 key in idle mode: Press and hold to activate or deactivate the keypad lock function.

 key in idle mode: Press and hold to turn on/off the ringer.

key in pre-dial / number editing mode: Press and hold to insert a space.

1,2,3 key in idle mode: Press and hold this key for 3 seconds to call the number saved in that key (speed dial function)


14. CALL BLOCK

When ringing (incoming call): Press this key then **Menu/ OK** to refuse the incoming call and add the number to the blacklist







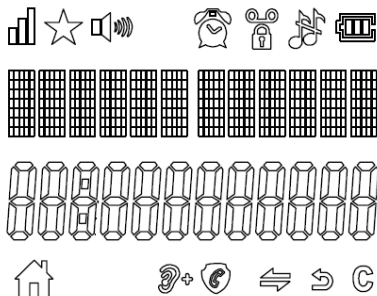

15. PHONEBOOK ()









In idle mode: Press to access the phonebook.

4.2 Handset LCD Display Icons and Symbols



The screen display gives you information on the current status of the telephone.

| | |
|--|---|
|  | Indicates the current signal strength. More bars indicate more signal strength. If the handset is too far from the DECT Base, this symbol will disappear on the LCD |
|  | Steadily on when an intercom call is in progress. Flashes when there is an incoming internal call or an internal call is put on hold. |
|  | Steadily on when an external or intercom call is in progress. Symbol flashes when there is an incoming call |
|  | Steadily on in speaker phone mode (speaker phone is turned on). |
|  | Steadily on when the battery is fully charged. Animates to shown when the batteries are charging. |
|  | Symbol flashes to indicate a low battery warning, and that the batteries need charging (an audible beep is also heard). |
|  | Steadily on when any block mode/ w/o num is enabled. Display in the call list for the blocked call entry. |
|  | Steadily on when an alarm is set. Flashes when the alarm time is reached. |

| | |
|--|---|
|  | Steadily on to indicate a new Voice Message Waiting (VMWI) that has not yet been read. Symbol disappears when all the voice messages have been read. |
|  | Steadily on when the keypad is locked. |
|  | Steadily on when the ringer is switched off. |
|  | Steadily on when there are new call(s) in call list. |
|  | Steadily on when the handset volume boost function is ON |
|  | Press to clear a character or stop the alarm if applicable. During a call, press to mute / unmute. |
|  | Informs you that that pressing the  key will return you to the previous menu (when you are in a menu or sub menu). |

4.3 Handset Menu Setting

CALL BLOCKER

- ▶ BLACK LIST
- ▶ SETTINGS (BLOCK MODE, CALL TYPE)

CALL LIST

- under an entry: ▶ DETAILS ▶ ADD TO PB ▶ ADD TO BLACKLIST ▶ DELETE
▶ DELETE ALL ▶ CATEGORY

PHONEBOOK

- ALL CONTACTS ▶ (under an entry: ▶ ADD ▶ ADD TO VIP ▶ VIEW ▶ EDIT
▶ DELETE ▶ DELETE ALL ▶ PB STATUS)
VIP ▶ under an entry: ▶ VIEW ▶ DELETE ▶ DELETE ALL

BS SETTINGS

- ▶ DELETE HS ▶ DIAL MODE ▶ FLASH TIME ▶ CHANGE PIN ▶ ECO MODE

HS SETTINGS

- ▶ ALARM ▶ RING SETUP ▶ TONE SETUP (KEY TONE, BATTERY TONE, OUT OF RANGE) ▶ LANGUAGE ▶ RENAME HS ▶ AUTO ANSWER ▶ DATE & TIME (DATE FORMAT ▶ TIME FORMAT ▶ SET TIME) ▶ DIRECT MEM

REGISTRATION

- DEFAULT:** ▶ PIN? **0000** by default

4.4 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook or renaming your handset

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:




1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by ▲/▼ to amend the text entry.
3. Press **RIGHT SOFTKEY** (↔) on the handset to delete the last character.
4. Press and hold **RIGHT SOFTKEY** (↔) on the handset to delete the entire text string.

4.5 English Character Set

| KEY | Alphanumeric Editing (For phonebook name editing and remaining handset) | | | | | | | | | | Number Editing (For phone number editing, date/ time editing) | |
|-----|--|-----|-----|-----|-----|-----|-----|-----|-----|-----------------|--|--------------|
| | press | 1st | 2nd | 3rd | 4th | 5th | 6th | 7th | 8th | 9 th | | 10th |
| 1 | space | - | 1 | | | | | | | | | 1 |
| 2 | A | B | C | 2 | | | | | | | | 2 |
| 3 | D | E | F | 3 | | | | | | | | 3 |
| 4 | G | H | I | 4 | | | | | | | | 4 |
| 5 | J | K | L | 5 | | | | | | | | 5 |
| 6 | M | N | O | 6 | | | | | | | | 6 |
| 7 | P | Q | R | S | 7 | | | | | | | 7 |
| 8 | T | U | V | 8 | | | | | | | | 8 |
| 9 | W | X | Y | Z | 9 | | | | | | | 9 |
| 0 | 0 | | | | | | | | | | | 0, P (Pause) |
| * | * | ? | / | \ | (|) | | | | | | * |
| # | # | ' | , | - | . | & | | | | | | # |

5. USING YOUR PHONE




5.1 Make an External Call

Dial the phone number then press  or  to call. Press **CANCEL/MUTE**  to delete an incorrect digit.

5.2 Direct Dialing

Press  or  to get a dial tone then dial the phone number.

5.3 Call from the Phonebook



Press  to access the phonebook then using the   keys select the desired entry in the phone book.


Press  or  to call the selected phone number.

Press  to end the call.

5.4 Call from the call log (20 last numbers)

Press  to access the call log.



Use the   keys to select the desired entry in the call log.

Press  or  to call the selected phone number.

Press  to end the call.

5.5 Call from the redial list (10 last numbers)



Press  to access the redial list.

Use the   keys to select the desired entry in the redial list.

Press  or  to call the selected phone number.

Press  to end the call.


5.6 Answer a Call



If the handset is not on the charging cradle, when the phone rings, press  or  to answer the call.


If the handset is on the charging cradle with **AUTO ANSWER** set to **ON**, when the phone rings, pick up the handset to answer.

5.7 BOOSTER Function

The BOOSTER function allows you to amplify the handset earpiece volume, which may make it easier to hear the call if you have hearing loss. **CAUTION: the handset earpiece can be very loud when the BOOSTER function is on.**

Press the  key at any time during a call. The display reads "BOOST ON". The red-light indicator above the handset's earpiece will turn on.

When the BOOSTER function is on, use the   keys to increase or decrease the handset earpiece volume.

Press the  key again to turn off the BOOSTER function, the red-light indicator above the handset's earpiece will go off.

NOTE: The BOOSTER function is deactivated automatically at the end of each call.

5.8 Adjust earpiece and speaker volume

There are 5 volume levels to choose from (VOLUME 1 to VOLUME 5) for the earpiece and speaker volume.

During a call: Use the ▼▲ keys to set the volume to the desired level. The current level is shown on the display. NOTE: The volume level is not reset at the end of the call, it will remain at the last selected volume level for future calls.

5.9 Call Timer

The handset will automatically time the duration of each call. The call time will show on the handset display shortly after the call has ended. It is shown in hours, minutes and seconds format (HH:MM:SS).

5.10 End a Call

During a call, press  to end the call.



OR

Put the cordless handset on the charging cradle to end the call.



5.11 Mute a Call



With the call muted, you can talk to someone nearby without letting the caller hear you during a call.

During a call:

Press **RIGHT SOFTKEY**  to mute the microphone, "MUTED" will be displayed on the handset screen. Your caller cannot hear you. Press **RIGHT SOFTKEY**  again to unmute the microphone.

 

5.12 Set the Handset Silent Mode

 

In idle mode, press and hold  to turn off the handset ringer. The  symbol will be displayed on the handset screen.

In silent mode, press and hold  to turn on the handset ringer. The  symbol will disappear.

5.13 Set the Handset Keypad Lock

You can turn the keypad lock on or off. When the keypad lock is on, it prevents accidental operation of the handset.

In idle mode, press and hold  to turn on the keypad lock. The  symbol will display on the handset screen.


In keypad lock mode, press and hold  to turn off the keypad lock. The  symbol will disappear.



5.14 Find the Handset

This feature helps you to find misplaced handset(s).

You can locate the handset from the DECT base station as below.

- In idle mode, press /HANDSETLOCATOR.

All the handsets registered to the base will produce the paging tone. "PAGING" will flash on the handset display. You can stop the paging by pressing .

Press the **RIGHT SOFTKEY**  on any handset or /**HANDSET LOCATOR** on the DECT base to stop paging.




NOTE:

If there is an incoming call during paging, the phone will ring with the incoming call.

5.15 Redial the Last Number

You can redial up to 10 last called numbers. If you have stored a name in the phonebook to match with the number, the name will be displayed instead. The most recently dialed number will be displayed at the top of the redial list.

5.15.1 Redial a Number from the Redial List

1. In idle mode, press  to access the redial list.
2. Press  to browse the redial list.
3. Press  to dial the selected redial number.



NOTE:


If there is no number in the redial list, the display will show "EMPTY".

5.15.2 Store a Redial Number into the Phonebook

In idle mode, press  to access the redial list.

Press  to browse the redial list.

1. Press **MENU / OK**  then use the  keys to select **ADD TO PB**.
2. Press **MENU / OK** then enter the name.
3. Press **MENU / OK** then check the phone number
4. Press **MENU / OK** to save

Note: To delete one character or digit, press **RIGHT SOFTKEY** .

5.15.3 Delete a Redial Number

In idle mode, press  to access the redial list.

Press  to browse the redial list.

Press **MENU / OK**  then use the  keys to select **DELETE**.

Press **MENU / OK**, "CONFIRM" is displayed.

Press **MENU / OK** to confirm.

5.15.4 Delete the Entire Redial List

In idle mode, press  to access the redial list.

Press  to browse the redial list.

Press **MENU / OK**  then use the  keys to select **DELETE ALL**.

Press **MENU / OK**, "CONFIRM" is displayed.

Press **MENU / OK** to confirm.

5.16 Call transfer or 3-way conference function

5.16.1 Make an Internal Call





This feature allows you to make internal calls, transfer external calls and make conference calls. If the called handset is not answered within 60 seconds, it will stop ringing and the handset from which the internal call is made will return to standby mode.

5.16.2 Intercom

1. In idle mode, press the **RIGHT SOFTKEY**  and the numbers of the registered handsets will be displayed (except the calling handset).
2. Select the desired handset number that you want to intercom with.
3. The called handset rings. Press  on the called handset to establish the internal call.

5.16.3 Transfer an External Call





During an external call:

1. Press **MENU / OK**  then press the **▼▲** keys to select **INTERCOM**.
2. Press **MENU / OK** to select the desired handset you want to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press  or  on the called handset to establish an internal call.
5. Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is now transferred to the called handset.

5.16.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with the caller and up to two handsets. The three parties can share the conversation and no network subscription is required.

During the external call:

1. Press **MENU / OK**  then press the **▼▲** keys to select **INTERCOM**.
2. Press **MENU / OK** to select the desired handset you want to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press  or  on the called handset to establish an internal call.
5. Press and hold  on the calling handset to establish the conference call.

NOTE:

Any party in a conference call (whether from a handset or base) can hang up. The other party/parties will still be connected to the external call.

6. PHONEBOOK


Up to 60 names and numbers can be stored in the Liberty200's phonebook for both regular and VIP contacts. The phone numbers saved in the phonebook can have up to 24 digits. Contact names cannot have more than 12 characters. It is possible to have a specific ringtone for each phonebook entry.

Phonebook entries are stored alphabetically by name.



Use the  key to delete a character, and the  key to confirm.

6.1 Adding a new phonebook entry

Press **MENU/OK**  and using the **▼▲** keys select "PHONEBOOK", then press **MENU/OK**, "ALL CONTACTS" is shown on the display.

Press **MENU/OK** twice, "ADD" is shown on the display.

Press **MENU/OK**, the display now shows "NAME", now enter the name.


Press **MENU/OK**, the display now shows "NUMBER", now enter the number.

Press **MENU/OK** and using the **▼▲** keys select the desired ringtone for your phonebook entry.


Press **MENU/OK** to save.

6.2 Dial a Phonebook Entry

Press directly .

Press the **▼▲** keys to select the desired phonebook entry then press  to dial.

6.3 Adding a contact in the VIP phonebook

Press **MENU/OK**  and using the **▼▲** keys select "PHONEBOOK" then press **MENU/OK**, the display reads "ALL CONTACTS".

Press **MENU/OK** to access the phonebook.

Select the contact to place in the VIP phonebook using the **▼▲** keys.

Press **MENU/OK** then using the **▼▲** keys select "ADD.TO VIP"

Press **MENU/OK** to confirm.


6.4 Edit or View one contact in phonebook


Press **MENU/OK**  and using the **▼▲** keys select "PHONEBOOK".

Press **MENU/OK**, the display reads "ALL CONTACTS".

Select the contact to Edit or View in the phonebook using the **▼▲** keys.

Press **MENU/OK** then using the **▼▲** keys select **EDIT** or **VIEW**.


Press **MENU/OK**, the display reads "NAME", press **Cancel/ Mute**  to delete incorrect characters then enter the correct name.

Press **MENU/OK**, the display reads "NUMBER », press **Cancel/ Mute**  to delete the incorrect digit then enter the correct phone number.

Press **MENU/OK** and using the **▼▲** keys select the desired ringtone for your phonebook entry.

Press **MENU/OK** to save.

6.5 Deleting contacts from the phonebooks

Press **MENU/OK**  and using the **▼▲** keys select "PHONEBOOK", then press **MENU/OK**.
Select "ALL CONTACTS" or "VIP", then press **MENU/OK** to access the phonebook.

Select the contact to delete then press **MENU/OK**

Select "DELETE" or to delete all the contacts in the phonebook "DELETE ALL".

Press **MENU/OK**, the display reads "CONFIRM".

Press **MENU/OK** to confirm.

6.6 Check the Phonebook Usage

You can check how many phonebook entries are stored in your phone, and how many phonebook entries are available for you to store more entries.

Press **MENU/OK**  and using the **▼▲** keys select "PHONEBOOK"

Press **MENU/OK**, the display reads "ALL CONTACTS".

Press **MENU/OK** twice then using the **▼▲** keys select **PB STATUS**.


Press **MENU/OK**, the display reads « XX/60 » (XX is the number of phonebook and VIP entries).

Press **MENU/OK** to exit.

7 CALL BLOCKER FUNCTION

This feature allows you to block the calls coming from the numbers you have saved in the blacklist, which can contain up to 60 contacts. You have the option to reject all calls from blacklisted numbers, all calls, or all calls except those from regular and VIP contacts, and all private or unknown numbers.

7.1 Using the call block key

When ringing: Press the call block key  then **MENU/OK**. The phone stops ringing and the number is automatically added to the blacklist.

7.2 Adding a black listed phone number

Press **MENU/OK** , "CALL BLOCKER" is shown on the display.

Press **MENU/OK** 3 times, "ADD" is now shown on the display.

Press **MENU/OK** then enter the name.

Press **MENU/OK** then enter the number.

Press **MENU/OK** to save.

7.3 Activating the black list function


You can either block all the incoming calls, authorize only the VIP or phonebook numbers, or deactivate the black list function.

Press **MENU/OK** , "CALL BLOCKER" is shown on the display.

Press **MENU/OK** then using the **▼/▲** keys select "SETTINGS".

Press **MENU/OK**, "BLOCK MODE" is shown on the display.

Press **MENU/OK** then choose between "OFF", "BLOCK ALL", "ALLOW PB" or "ALLOW VIP".

Press **MENU/OK** to confirm your choice, the  symbol is shown on the display.

7.4 Activating the function to block the private, international, payphone, or unavailable numbers

Press **MENU/OK** , "CALL BLOCKER" is shown on the display.

Press **MENU/OK** then using the ▼/▲ keys select "SETTINGS".


Press **MENU/OK** then using the ▼/▲ keys select "CALL TYPE".

Press **MENU/OK** and choose between "WITHHELD", "INTERNAT'L", "UNAVAILBLE" or "PAYPHONE".

Press **MENU/OK** then using the ▼/▲ keys select "ON"

Press **MENU/OK** to confirm.

7.5 Deleting one or all black listed numbers

 Every month, we advise you to delete 30 phone numbers from your blacklist so that it does not remain filled with numbers that are no longer trying to call you.

Press **MENU/OK** , "CALL BLOCKER" is shown on the display.

Press **MENU/OK** twice, then using the ▼/▲ keys choose the black listed phone number to be deleted.

Press **MENU/OK** then using the ▼/▲ keys select "DELETE" or "DELETE ALL".

Press **MENU/OK**, the display reads "CONFIRM?".


Press **MENU/OK** to confirm.


7.6 Edit or view one black listed number

Press **MENU/OK** , "CALL BLOCKER" is shown on the display.

Press **MENU/OK** twice, then using the ▼/▲ keys choose the blacklisted phone number to delete.

Press **MENU/OK** then using the ▼/▲ keys select **EDIT** or **VIEW**.

Press **MENU/OK**, the display reads "NAME", press **Cancel/ Mute**  to delete an incorrect character then enter the correct name.

Press **MENU/OK**, the display reads "NUMBER", press **Cancel/ Mute**  to delete the incorrect digit then enter the correct phone number.


Press **MENU/OK** to save.



8 CALLER DISPLAY(NETWORK DEPENDENT)

This feature is available if you have subscribed to the Caller Identification service from your network provider. Your phone's call log can store the 20 last received calls with date and timestamp. The number is shown on the display when the phone is ringing. If the number matches with one of the entries in the phonebook, the caller's name that is saved in the phonebook is displayed along with the number. The ringtone will be the one associated with that phonebook entry. When in idle mode, in the event that three calls were missed, the display reads "3 NEW CALLS".

8.1 View the Call Log




All missed and accepted calls are saved in the call log with the latest call at the top of the list. If the call log is full and a new call is received, the oldest call in the call log will be deleted and replaced. Unanswered calls are identified with the ★ icon.

Press the  key to access the call log.

Use the   keys to see the previous calls.

8.2 More information on the call log

It is possible to retrieve more information on missed calls (Date, Hour and phone number).

Press  to access the call log then press the / keys to select the desired call list entry.

Press **MENU/OK** then using the / keys select "DETAILS".


The phone displays the date, hour and phone number of the missed call entry..


Press  to exit.



8.3 Store a Call List Number into the Phonebook

Press  to access the call log then / to select the desired call list entry.

Press **MENU/OK** then using the / keys select "ADD TO PB".

Press **MENU/OK** then enter the name. Press **Cancel/ Mute**  to delete the bad characters then enter the correct name.

Press **MENU/OK** then check the phone number. Press **Cancel/ Mute**  to delete the bad number then enter the correct phone number.


Press **MENU/OK** then using the   keys select the desired ringtone for your phonebook entry.


Press **MENU/OK** to save.

8.4 Store a Call List Number into the Blacklist

Press  to access the call log then / to select the desired call list entry.

Press **MENU/OK** then using the / keys select "ADD TO BLIST".



Press **MENU/OK** then enter the name. Press **Cancel/ Mute**  to delete the bad characters then enter the correct name.

Press **MENU/OK** then check the phone number. Press **Cancel/ Mute**  to delete the bad number then enter the correct phone number.

Press **MENU/OK** to save.

8.5 Delete an Entry or the entire Call List

Press  to access the call log then / to select the desired call list entry.

Press **MENU/OK** then using the / keys select "DELETE" or "DELETE ALL".

Press **MENU/OK**, the display reads "CONFIRM?".



Press **MENU/OK** to confirm.

8.6 Choosing the type of list of received calls to display

If you go to the list of received calls, a list of received and missed calls is displayed. If you wish, you can also display only missed calls.

Press  to access the call log then / to select the desired call list entry.

Press **MENU/OK** then using the / keys select "CATEGORY".



Press **MENU/OK** then using the / keys select "ALL CALLS" or "MISSED CALLS".

Press **MENU/OK** to confirm.



9. PHONE SETTINGS

The Liberty 200 has a selection of settings that allows you to personalize the way it works.

9.1 Alarm Settings

You can use this phone to set an alarm. When an alarm is set, the  symbol is shown on the handset display. When the alarm goes off, the  symbol and the words "ALARM ON" will flash on the display. The phone will ring for 45 seconds. Press any key to mute the alarm. If the snooze function is activated, the alarm will go off for seven minutes then restart. To deactivate the alarm function, you need to select "OFF" as described below.

NOTES:

- Pressing on a key to mute the alarm works even if the handset's keypad is locked.
- The volume (loudness) of the alarm is the same as that set for the ringer. **NOTE:** If the ringer is deactivated (volume set to **OFF**), the volume of the alarm will be set at **VOLUME 1**.
- If you are on a call at the same time the alarm goes off, the  symbol and "ALARM ON" will flash on the display. A tone will be heard in the earpiece to notify you that the time set for the alarm has been reached. Pressing any key or pressing and holding the  key mutes the alarm and the display will return to the call duration screen.
- If the snooze function is activated, the alarm will go off again at the end of the set snooze period. **NOTE:** Complete deactivation of the alarm is required via the menu in order to stop the alarm ringing every seven minutes.

9.2 Turn on/off the alarm

Press **MENU/OK** then using the **▼▲** keys select "HS SETTINGS".

Press **MENU/OK** then using the **▼▲** keys select "ALARM".

Press **MENU/OK** then using the **▼▲** keys select "ON" or "OFF" (deactivated).

Press **MENU/OK** then enter the alarm time.

Press **MENU/OK**, the display reads "SNOOZE".

Press **MENU/OK** then using the **▼▲** keys select "ON" or "OFF"

Press **MENU/OK** to confirm.

9.3 Set the ringer melody for external calls

You can select a melody to personalise the ringtone for an incoming external call. There are 10 melodies to choose from..

Press **MENU/OK** then using the **▼▲** keys select "HS SETTINGS".

Press **MENU/OK** then using the **▼▲** keys select "RING SETUP".

Press **MENU/OK**, the display reads "EXT RING".

Press **MENU/OK** then using the **▼▲** keys select the desired melody for your external calls.

NOTE: The melodies are played while you are browsing the melody list.

Press **MENU/OK** to confirm.

9.4 Set the ringer melody for internal calls

You can select a melody to personalise the ringtone for an internal call. There are 10 melodies to choose from.

Press **MENU/OK** () then using the **▼▲** keys select "HS SETTINGS".

Press **MENU/OK** then using the **▼▲** keys select "RING SETUP".

Press **MENU/OK**, the display reads "INT RING".

Press **MENU/OK** then using the ▼▲ keys select the desired melody for your internal calls.

NOTE: *The melodies are played while you are browsing the melody list.*

Press **MENU/OK** to confirm.

9.5 Set the ringer volume


You can set the ringer volume level. There are 6 volume levels to choose from, including VOLUME OFF which turns off the ringer.

Press **MENU/OK**  then using the ▼▲ keys select "HS SETTINGS".

Press **MENU/OK** then using the ▼▲ keys select "RING SETUP".

Press **MENU/OK** then using the ▼▲ keys select "RING VOLUME".

Press **MENU/OK** then using the ▼▲ keys select the desired ringer volume. To help you choose, you will hear your phone ring at the volume level (loudness) shown on the display.

If "OFF" is selected, the  symbol will appear on the display (the ringer will be set to OFF).

Press **MENU/OK** to confirm.

9.6 Set Alert Tone

You have the possibility to set 3 different setting. A single beep is emitted when you press any a key. You can turn this on or off. You can also turn on the alert tones when low battery and out of range are detected. The low battery tone will be emitted during a call to alert you that the handset battery needs to be charged.

Press **MENU/OK**  then using the ▼▲ keys select "HS SETTINGS".

Press **MENU/OK** then using the ▼▲ keys select **TONE SETUP**.


Press **MENU/OK** then using the ▼▲ keys select **KEY TONE/ BATTERY TONE/ OUT OF RANGE**.

Press **MENU/OK** then using the ▼▲ keys select **ON** or **OFF**.

Press **MENU/OK** to confirm.

9.7 Set the language

You can choose the language to be displayed on the handset screen. There are 6 languages to choose from: English, French, Deutsch, Italian, Spanish and Dutch.

Press **MENU/OK**  then using the ▼▲ keys select "HS SETTINGS".

Press **MENU/OK** then select "LANGUAGE"

Press **MENU/OK** then using the ▼▲ keys select the desired language.

Press **MENU/OK** to confirm.

9.8 Rename the Handset

At the start, the name write on your display is handset. You have the possibility to change as follow:

Press **MENU/OK**  then using the ▼▲ keys select "HS SETTINGS".

Press **MENU/OK** then using the ▼▲ keys select "RENAME HS".

Press **MENU/OK** then press **Cancel/ Mute**  to delete handset then enter the correct name with the keypad.

Press **MENU/OK** to confirm

9.9 Activate the auto answer function

By activating the auto answer function, you will be able to answer a call simply by picking up the cordless handset from its charging cradle without pressing any key.

Press **MENU/OK**  then using the ▼▲ keys select "HS SETTINGS".

Press **MENU/OK** then using the ▼▲ keys select "AUTO ANSWER".


Press **MENU/OK** then using the ▼▲ keys select "ON" or "OFF".

Press **MENU/OK** to confirm.

9.10 Clock Settings

You will need to set the correct date and time so that you know when you received call list entries.

9.10.1 Set the Date format

Press **MENU/OK**  then with the ▼/▲ keys select "HS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "DATE & TIME".

Press **MENU/OK** then with the ▼/▲ keys select "DATE FORMAT".

Press **MENU/OK** then with the ▼/▲ keys select your desired date format (DD--MM--YY or MM--DD--YY).

Press **MENU/OK** to confirm.

9.10.2 Set the time format

Press **MENU/OK**  then with the ▼/▲ keys select "HS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "DATE & TIME".

Press **MENU/OK** then with the ▼/▲ keys select "TIME FORMAT".

Press **MENU/OK** then with the ▼/▲ keys select your desired time format (12h or 24h).

Press **MENU/OK** to confirm.

9.10.3 Set Date & Time

Press **MENU/OK**  then with the ▼/▲ keys select "HS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "DATE & TIME".

Press **MENU/OK**.

Press **MENU/OK** then with the ▼/▲ keys select "SET TIME".

Press **MENU/OK** then set the correct time (hours and minutes) using the keypad, then confirm by pressing **MENU/OK**.

Enter the correct year using the keypad and confirm by pressing **MENU/OK**.

Enter the correct date using the keypad and confirm by pressing **MENU/OK**.

NOTE: If you receive a call and have subscribed to your provider's caller ID service, your phone will automatically set the correct date and time (but not the year).

9.11 Set the speed dial numbers

You can save a contact number in one of the speed dial keys (keys 1, 2 and 3 on the handset keypad). In idle mode you can call that number simply by holding and pressing the speed dial key in which it was saved.


9.11.1 Add a Speed Dial Number

Press **MENU/OK**  then using the ▼▲ keys select "HS SETTINGS"

Press **MENU/OK** then using the ▼▲ keys select "DIRECT MEM".

Press **MENU/OK** then using the ▼▲ keys select one of the three digit keys (KEY 1 to KEY 3).

Press **MENU/OK** then enter the phone number.

If you made a mistake while entering the number, use the  key to delete the last entered digit.


Press **MENU/OK** to confirm.

9.12 HANDSET BASE CHARGER SETTINGS

9.12.1 De-register a Handset

Enter the 4-digit system PIN (0000 by default) to de-register a handset from the handset base charger. "REGISTER" will appear on the handset display.

NOTE: You cannot de-register the handset that you are currently using.

Press **MENU/OK**  then with the ▼/▲ keys select "BS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "DELETE HS".


Press **MENU/OK** then enter the 4-digit system PIN.

Press **MENU/OK** then with the ▼/▲ keys select handset/s to de register.

Press **MENU/OK** to confirm.

9.12.2 Set the dial mode

The default dial mode is best suitable for your country and network operator. **NOTE: It is unlikely that you should need to change this setting unless advised to do so.**

Press **MENU/OK**  then with the ▼/▲ keys select "BS SETTINGS".


Press **MENU/OK** then with the ▼/▲ keys select "DIAL MODE".

Press **MENU/OK** then with the ▼/▲ keys select your desired dial mode (**TONE** or **PULSE**).

Press **MENU/OK** to confirm.

9.12.3 Set the Flash Time

The default flash time is best suitable for your country and network operator. **NOTE: It is unlikely that you should need to change this setting unless advised to do so.**

Press **MENU/OK**  then with the ▼/▲ keys select "BS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "FLASH TIME".

Press **MENU/OK** then with the ▼/▲ keys select your desired flash time (**SHORT** 100ms,

MEDIUM 300ms, **LONG** 600ms).

Press **MENU/OK** to confirm.

9.12.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the handset base charger. It is used to protect your phone against unauthorized use. **NOTE: The default system PIN code is 0000. If you change the system PIN code, make sure you make a note of it for future reference, but don't keep the new PIN code near the phone.**

Press **MENU/OK**  then with the ▼/▲ keys select "BS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "CHANGE PIN".

Press **MENU/OK** then you are requested to enter the old 4-digit system PIN.


Press **MENU/OK** then you are requested to enter the new 4-digit system PIN.

Press **MENU/OK**, the display reads "CONFIRM", enter the new 4-digit system PIN.

Press **MENU/OK** to confirm.

9.12.5 Set the eco mode

Eco mode reduces the operating distance between the handset and the DECT base station (reduced system range).

Press **MENU/OK**  then with the ▼/▲ keys select "BS SETTINGS".

Press **MENU/OK** then with the ▼/▲ keys select "ECO MODE".

Press **MENU/OK** then using the ▼ ▲ keys select "ON" or "OFF".

Press **MENU/OK** to confirm.

10. HANDSET REGISTRATION

NOTE: The handset and the DECT Base are pre-paired. It is possible to add additional handsets. A maximum of 5 handsets can be paired to the DECT Base.

The default PIN code to enter when pairing a handset is **0000**

Pairing an additional handset

On the DECT Base, press and hold the  / **HANDSET LOCATOR** key to enter pairing mode.

On the handset: press **MENU/OK**, then using the ▼ ▲ keys select "REGISTRATION"


Press **MENU/OK** then enter the 4-digit PIN.

Press **MENU/OK**.

After a short while, the handset display will return to the idle screen and show the new handset number.

11. Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook list remains unchanged.

Press **MENU/OK**  then using the ▼ ▲ keys select "DEFAULT".

Press **MENU/OK** then you are requested to enter the 4-digit system PIN (default PIN is 0000)

Press **MENU/OK**, the display reads "CONFIRM".

Press **MENU/OK** to confirm.

12.TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

| Problem | Solutions |
|---|--|
| My telephone does not work at all. | <ul style="list-style-type: none">• Make sure the handset batteries are installed and charged correctly.• For optimum daily performance, return the handset to the Handset Base Charger after use.• Make sure the power adapter is securely plugged into a mains electrical socket not controlled by a wall switch.• Make sure the telephone line cord is plugged firmly into the DECT Base and the telephone wall socket.• Unplug the electrical power to the DECT Base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and DECT Base to synchronize.• Remove and re-insert the handset battery. If that still does not work, it might be necessary to purchase a new battery.• Disconnect the DECT Base from the telephone wall socket and plug in a known working telephone. If the other telephone does not work, the problem is likely to be the wiring or a service connection issue. Call your telephone service provider. |
| Low battery shows on handset display. | <ul style="list-style-type: none">• Place the handset in the Handset Base Charger to recharge it.• Remove and re-install the handset batteries and use it until the batteries are fully depleted, then recharge the handset in the handset base charger. |
| The batteries do not charge in the handset, or the handset battery does not accept charge. | <ul style="list-style-type: none">• Make sure the handset is placed in the Handset Base Charger.• Remove and reinstall the handset battery, then charge for up to 16 hours.• Purchase a new battery. |

There is interference during a telephone conversation. My calls fade out when I am using the handset.

- The handset may be out of range. Move it closer to the DECT Base.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the DECT Base and the telephone wall socket. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same mains electrical socket as the DECT Base can cause interference
- Try moving the appliance or the DECT Base to another mains electrical socket.
- Other electronic products may cause interference to your cordless telephone. Install your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem them further apart from each other, or use a different surge protector.
- The location of your DECT Base can impact the performance of your cordless phone. For better reception, install the DECT Base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the DECT Base may improve overall performance.
- Disconnect the DECT Base from the telephone wall socket and plug in a corded telephone. If calls are still not clear, the problem is probably with the wiring or the telephone service provider.
- Contact your telephone service provider (charges might apply).
- If the other telephones in your home have the same problem, the problem may be due to the wiring or with your telephone service provider.

 
Common cure for electronic equipment. If the telephone is not responding normally, put the handset in the handset base charger. If it does not respond, try the following (in the order listed):

- Disconnect the power to the handset base charger.
 - Remove the batteries from the handset.
 - Wait a few minutes before connecting power to the handset base charger.
 - Re-install the batteries and place the handset in the handset base charger.
 - Wait for the handset to synchronize with the handset base charger. Allow up to one minute for this to take place.
-

This telephone is not equipped with a grounding function! Therefore, some of the functions may be limited when used in PBX systems.

Please contact the technical support of the network provider for further information.

13. TECHNICAL SPÉCIFICATIONS

| Basic Information | |
|--------------------------|--|
| Operating Range | Indoor: 50m Outdoor :300m |
| Handset Operating time | Standby time: 100 hours Talk time : 10 hours approx. |
| RF Parameter | |
| Frequency | 1.88 GHz to 1.9GHz |
| Nb Channels | 10 |
| RF power | < 250mW |
| Power Supply | |
| Telephone base & Charger | Input 100-240V 50/60Hz; output DC6V  0.45A, 2.7W adapter |
| Handset | 2X1,2V ; 400mAH rechargeable NiMh battery |

Manufacturer: Vtech (Dongguan) Telecommunications Limited.
Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan, Guangdong.

Produit fabriqué en Chine pour Geemarc Telecom

14 GUARANTEE

From the moment your Geemarc Liberty 200 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

UKCA Directives

Geemarc Telecom SA hereby declares that this Liberty 200 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The UKCA declaration of conformity may be consulted at www.geemarc.com

15 RECYCLING DIRECTIVE:

The WEEE (Waste Electrical and Electronic Equipment) is put in place to ensure products are correctly recycled at the end of their useful life. When this product is at the end of its useful life, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.

Deposit the product in an appropriate WEEE skip.

- Or, hand the product to the retailer. If you purchase a new one, they should accept it.

If you follow these instructions you ensure human health and environmental protection.



For product support and help visit our website at www.geemarc.com

E-mail: help@geemarc.com telephone **01707 387602**

lines are open 09h00 to 16h00 Mon to Fri



Pour en savoir plus :
www.quefairedemesdechets.fr

UG Liberty200_UK_v1.0

Geemarc Telecom FRANCE
2 rue Galilée-
Parc de l'étoile
59760 GRANDE-SYNTHE
France
E-Mail: help@geemarc.com
Téléphone 01707 387602