



AMPLIDECT™ COMBI 595



USER GUIDE

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS.....	1
2.	SET UP THE TELEPHONE	2
2.1	Package Contents.....	2
2.2	Location.....	2
2.3	Connect the Corded Base Station.....	3
2.4	Install and Charge the Handset Battery.....	4
2.5	First use of your handset.....	4
2.6	Base Station Installation options	5
2.6.1	Tabletop to Wall Mount Installation.....	5
2.6.2	Wall Mount to Tabletop Installation.....	6
3.	GET TO KNOW YOUR PHONE	7
3.1	Overview of the Corded base.....	7
3.2	Overview of the Handset.....	10
3.3	Overview of the Handset Charger.....	12
3.4	Handset LCD Display Icons and Symbols.....	12
3.5	Base corded Menu Structure.....	13
3.6	Handset menu structure.....	14
3.7	Base LCD Display.....	15
3.8	Text and Digit Entry Table.....	16
3.8.1	English Character Set.....	16
4.	USE YOUR PHONE.....	17
4.1	Make an External Call.....	17
4.1.1	Preparatory Dialing.....	17
4.1.2	Direct Dialing.....	17
4.1.3	Call from the Phonebook.....	17
4.1.4	Call from the incoming Call List.....	18
4.1.5	Call from the Redial List.....	18
4.1.6	Call Timer.....	18
4.2	Make a Call from Direct Access Memory.....	19
4.3	Answer a Call.....	19
4.4	Volume Boost Function.....	20
4.5	End a Call.....	20
4.6	Adjust Earpiece and Speakerphone Volume.....	21
4.7	Mute a Call.....	21
4.8	Modify the tonality during a call.....	21
4.9	Emergency Call without Main Power.....	22
4.10	Redial the Last Number.....	22
4.10.1	Redial a Number from the Redial List.....	23
4.10.2	Store a Redial Number into the Phonebook.....	23
4.10.3	Delete a Redial Number.....	24
4.10.4	Delete the Entire Redial List.....	24
4.11	Find the Handset.....	25
4.12	Make an Internal Call.....	25
4.12.1	Intercom.....	25
4.12.2	Call All Handsets.....	25
4.12.3	Transfer an External Call.....	26
4.12.4	Make a 3-way Conference Call.....	26
5.	PHONEBOOK.....	27
5.1	Add a New Phonebook Entry.....	27
5.2	Search for a Phonebook Entry.....	28
5.3	View a Phonebook Entry.....	28
5.4	Edit a Phonebook Entry.....	29
5.5	Delete a Phonebook Entry.....	30
5.6	Delete the Entire Private Phonebook.....	30

5.7	Check the Phonebook Usage.....	31
5.8	Set the Fast Dial Numbers	32
5.8.1	Add or Edit the Fast Dial Number	32
5.8.2	view a Fast Dial Number	33
5.8.3	Delete the fast dial number	33
5.8.4	Delete all the fast dial number.....	33
5.9	VIP NUMBER.....	34
5.9.1	Record a VIP number.....	34
5.9.2	Use a VIP number.....	34
5.9.3	Delete one or all VIP number	34
5.9.4	Record VIP number in photo memory	34
5.9.5	Check the VP usage	35
6	CALLER DISPLAY (NETWORK DEPENDENT).....	36
6.1	View the Call List	36
6.2	Details on the call list number	36
6.3	Store a Call List Number into the Phonebook	37
6.4	Store a Call List Number into the Blacklist.....	37
6.5	Store a Call List Number into a Photo memory	37
6.6	Delete an or all the Entire Call List	38
7	DIRECT MEMORIES KEYS	39
7.1	Record or Edit direct memory key	39
7.2	Record a voice tag.....	39
7.3	Listen or delete a voice tag	39
7.4	Delete a direct memory key	40
7.5	Set the memory keys	40
8	BLACK LIST FUNCTION	41
8.1	Record or edit a black list number	41
8.2	Check or edit the information of the phone number blocked.....	41
8.3	Delete an or all black list number	41
8.4	Activation of the black list function.....	42
8.5	Activation of the function for the private or unavailable number.....	42
9	INTERCOM FUNCTION	42
10	DATE AND HOUR SETTING	43
10.1	Set the date format	43
10.2	Set the time format.....	43
10.3	Set the date and time.....	43
11	TEXT LANGUAGE SETTING.....	43
12	PHONE SETTINGS.....	44
12.1	Base Settings using the Handset	44
12.1.1	Set the Ringer Melody	44
12.1.2	Set the Ringer Volume.....	44
12.1.3	Set the Flash Time.....	44
12.1.4	First ring function	44
12.2	Base Settings using the Base	45
12.2.1	Set the Ringer Melody for Internal Calls	45
12.2.2	Set the Ringer Melody for External Calls.....	45
12.2.3	Set the Ringer Volume.....	45
12.2.4	Set the key tone.....	46
12.2.5	Set the Flash Time.....	46
12.2.6	First ring function	46
12.2.7	Reset your base.....	46
12.3	Handset Settings	47
12.3.1	Set the Ringer Melody for Internal Calls	47
12.3.2	Set the Ringer Melody for External Calls.....	47
12.3.3	Set the Ringer Volume.....	47

12.3.4	Set Alert Tones	48
12.3.5	Set the Handset Language	48
12.3.6	Set the time & hour	48
12.3.6.1	Set the date format	48
12.3.6.2	Set the hour format	48
12.3.6.3	Set the Date & Hour	48
12.3.7	Registration.....	49
12.3.8	Reset your handset.....	49
13	RESEARCH ONE HANDSET	49
14	SOS EMERGENCY FUNCTION.....	50
14.1	SOS Setting.....	50
14.2	Delete an or all SOS number	50
14.3	Make an emergency call	50
14.4	Record SOS message	51
14.5	Play SOS message.....	51
14.6	Delete a SOS message.....	51
14.7	Set the talking language.....	51
15	SETTING AN ALARM	52
15.1	Turn ON/OFF the Alarm	52
15.2	Set the Alarm melody.....	53
15.3	Rename the name of your Alarm.....	53
15.4	Record a voice memo for the alarm	53
15.5	Delete or play a voice memo Alarm.....	53
16	TALKING HELP FUNCTION	53
17	ANSWERING MACHINE	54
17.1	Switching Answering Machine On/Off.....	54
17.2	Play Messages on TAM	55
17.3	Delete all Messages on TAM	56
17.4	Record Memos on TAM	57
17.5	Answering Machine Settings	58
17.5.1	Set the talking TAM language	58
17.5.2	Turn ON/OFF the base screening	58
17.5.3	Record your Outgoing Message (OGM)	59
17.5.4	Playback the Outgoing Message (OGM).....	60
17.5.5	Delete a Personalized OGM (SET OGM to DEFAULT)	61
17.5.6	Set the Answer Delay.....	61
17.5.7	Set the Recording Time of Incoming Message	62
17.5.8	Activate Remote Access	62
17.5.8.1	Change the 4-Digit Remote Access PIN	63
17.5.8.2	Activate or Deactivate the Remote access.....	63
17.5.9	Function message alert	63
17.5.10	Remote Operations.....	64
18	TROUBLESHOOTING.....	65
19	TECHNICAL SPECIFICATIONS	68
20	CARE AND MAINTENANCE INSTRUCTIONS.....	69
21	GUARANTEE.....	70
22	DECLARATIONS.....	71

1. IMPORTANT SAFETY INSTRUCTIONS

Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !

Congratulations!

Congratulations on purchasing your **Geemarc AMPLIDECT COMBI 595** telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications- DECT standard) together with an easy to see big button keypad, ideal for those who suffer with poor sight. This telephone is also hearing aid compatible.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential.

CAUTION: Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.

Normal operating temperature for the product (e.g. 0 °C ~ 40°C).

Use only the adapters and battery listed below.



Power adapter information: (**Base**) output: 6V DC 0.8A, 4.8W. Csec. Model: CS6F060080FGF (EU), CS6F060080FBF (UK)

(**Charger**) output: 6V DC 0.45A, 2.7W. Vtech Telecommunications Limited. Model: VT05EEU06045 (EU), VT05EUK06045 (UK)



Rechargeable Battery: Model: VT60AAAHC x 3pcs. 1.2V DC, 600mAh. GPI.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to the distributor under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The batteries may be damaged.
13. Battery should not be exposed to excessive heat such as bright sunshine or fire and immersed in water.
14. For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

Disposal warning

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products/battery should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.

For more detailed information about disposal of your old appliance/battery, please Contact your city office, waste disposal service or the shop where you purchased the product.

2. SET UP THE TELEPHONE



2.1 Package Contents

The package contains the following items:

- Base station
- Corded handset
- Cordless handset
- Charger with an AC poweradapter
- AC power adapter (for base unit)
- 3X NiMH rechargeable batteries (for handset)
- Telephone line cord (for base unit)
- User's manual

2.2 Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.

If the reception for a base unit location is not satisfactory, move it to another location for better reception.

Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

2.3 Connect the Corded Base Station


Plug one end of the telephone line cord into a telephone jack or a DSL filter.

If you have DSL high-speed Internet service, a DSL filter (not included) is required.

Route the telephone line cord through this slot.

Click the wall mount bracket securely into the mounting slots for tabletop use.

Plug the other end of the telephone line cord into the telephone jack on the back of the telephone base.

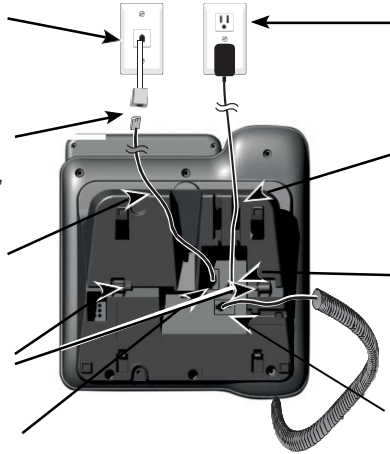

Plug the large end of the telephone base power adapter into a power outlet.

Route the power adapter cord through this slot.

Plug the small end of the telephone base power adapter into the power adapter jack on the back of the telephone base.

Plug the corded handset cord into the corded handset jack on the back of the telephone base.

NOTE

- Use only the power adapter supplied with the base station.



Plug the power adapter into a power outlet.

2.4 Install and Charge the Handset Battery

1. Slide the battery cover downwards. Install the 3 batteries into the socket as indicated, matching correct polarity (+, -).



2. Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.





3. Charge the handset by placing it face forward in the charger. You hear a beep when the handset is charging in the charger.


NOTES


- Use only the supplied NiMH rechargeable battery pack.
- If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.

2.5 First use of your handset

After you have inserted the batteries, the display asks you to select your text language with the keys ▼/▲, press  to valid.

Then enter the date with the keypad and validate by pressing .

Then enter the correct hour with the keypad and validate by pressing .

Then select your talking language with the keys ▼/▲, press  to valid.


2.6 Base Station Installation options

Your telephone base is ready for tabletop use. If you want to mount your telephone on a wall, follow the steps to connect the telephone base with a standard dual-stud telephone wall mounting plate. You may need a professional to install the mounting plate.


2.6.1 Tabletop to Wall Mount Installation

1. Unplug the power adapter from the power outlet. Unplug the telephone line cord from the wall jack (or DSL filter).
2. Put the corded handset aside. Hold down the switch hook on the telephone base, and then slide the handset tab upwards to remove it from the slot. Rotate the handset tab by 180 degrees. Then, replace the handset tab into the slot until it locks into position.
3. Press down on the tabs of the wall mount bracket to release it from tabletop orientation.
4. Rotate the wall mount bracket down and push it into the telephone base until it clicks into place.
5. Plug the telephone line cord (or DSL filter) into the wall jack. Plug the power adapter into a power outlet. Align the slots on the back of the telephone base with the studs of the wall mounting plate.
6. Slide the telephone base down until it locks securely. Bundle the telephone line cord and power adapter cord neatly with twist ties.

①

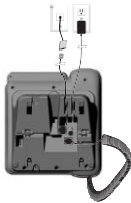


②

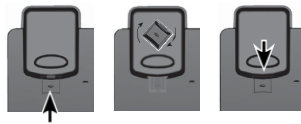


③




④

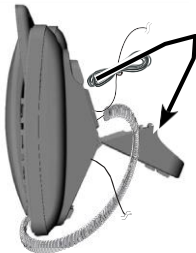

⑤

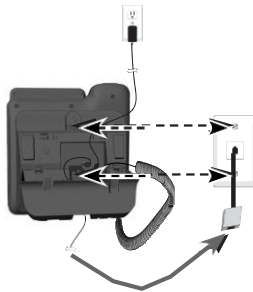


⑥

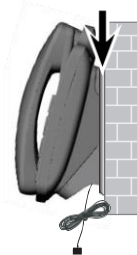


262 Wall Mount to Tabletop Installation

1. Unplug the power adapter from the power outlet. Unplug the telephone line cord from the wall jack (or DSL filter). If the telephone line cord and power adapter cord are bundled, untie them first. Push the telephone base up to remove it from wall.
2. Put the corded handset aside. Hold down the switch hook on the telephone base, and then slide the handset tab upwards to remove it from the slot. Rotate the handset tab by 180 degrees. Then, replace the handset tab into the slot until it locks into position.
3. Gently pull upward to release the wall mount bracket. Rotate the wall mount bracket up to tabletop position and push it into the telephone base until it clicks into place.
4. Plug the telephone line cord (or DSL filter) into the wall jack. Plug the power adapter into an power outlet. Bundle the telephone line cord and power adapter cord neatly with twist ties if necessary.


①

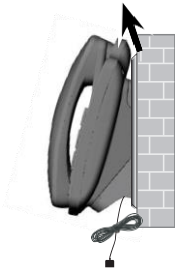


②

 

③

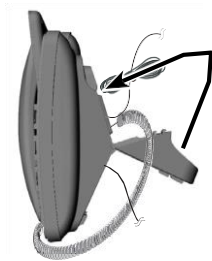


④

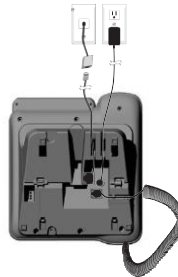





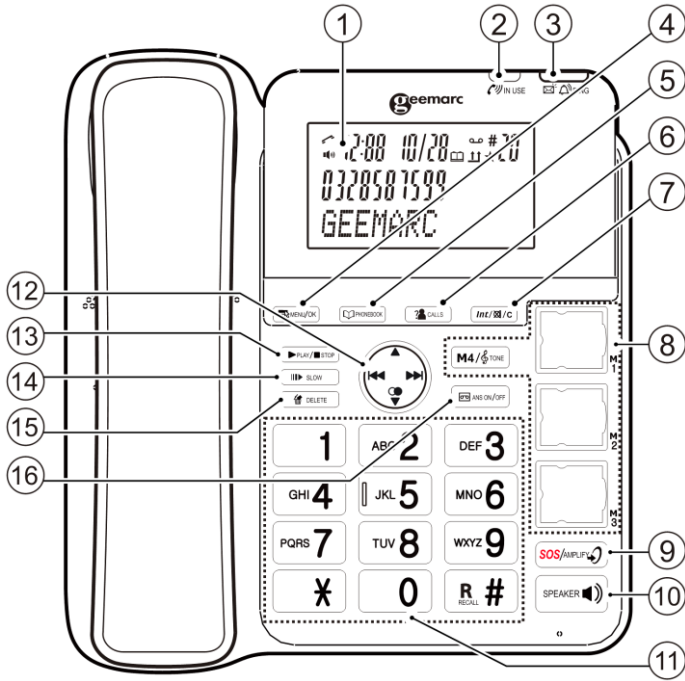







3. GET TO KNOW YOUR PHONE

3.1 Overview of the corded base







1	LCD DISPLAY
2	IN USE : ON during a call.
3	RING light <ul style="list-style-type: none"> • Flashes when there is an incoming call. • Steadily on when the answering machine is turned on. Flashes when there are new memos or messages in the answering machine.
4	MENU / OK <ul style="list-style-type: none"> • In idle mode: Press to access the main menu. • In sub-menu mode: Press to confirm the selection. • In Redial list/Call list: Press to store the number into Phonebook.
5	PHONEBOOK: <ul style="list-style-type: none"> • In idle: Press to access the phonebook.
6	CALLS (CALL LIST) <ul style="list-style-type: none"> • In idle mode: Press to access the call list.





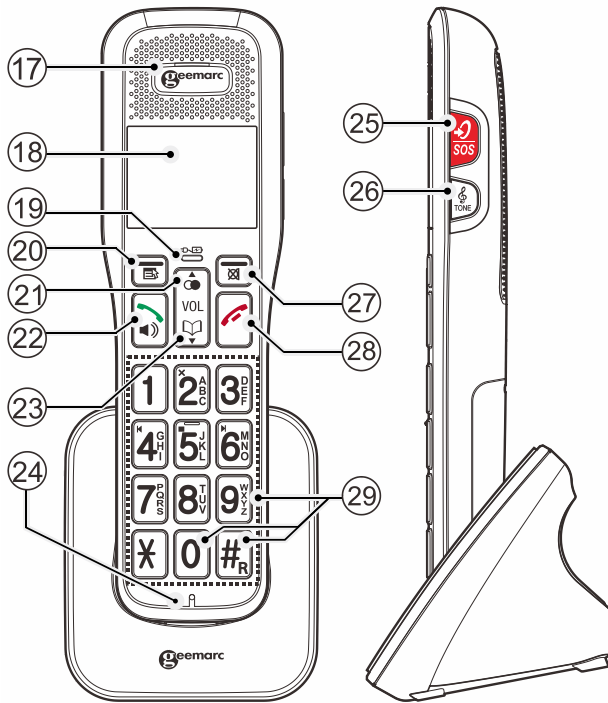

7	<p>Int/☒/C INT / MUTE / CLEAR</p> <ul style="list-style-type: none"> ● In main menu mode: Press to go back to idle screen. ● In sub-menu mode: Press to go back to previous level. ● In sub-menu mode: Press and hold to go back to idle screen. ● In editing / predialing mode: Press to clear a character/digit. ● In editing / predialing mode: Press and hold to delete all the character / digits. ● During a call: Press to mute / unmute the microphone. ● In ringing: Press to silence the base ringer. ● In idle mode: Press to intercom another system handset.
8	<p>MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 TONE KEY - M4</p> <ul style="list-style-type: none"> ● In idle mode: Press to dial out to the number stored in the memory key. ● During a call: press M4 to increase the high frequency or the low frequencies.
9	<p>SOS/AMPLIFY  VOLUME BOOST / SOS</p> <ul style="list-style-type: none"> ● During a call: Press to activate/deactivate the VOLUME BOOST function. ● In idle mode: Press and hold for 2 seconds to launch the emergency calling sequence set in your phone. ● In SOS mode: press and hold for 2 seconds to stop the emergency call.
10	<p> SPEAKER</p> <ul style="list-style-type: none"> ● In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.
11	<p>ALPHANUMERIC KEYPAD, STAR (*), HASH/RECALL (#/R)</p> <ul style="list-style-type: none"> ● In predial or editing mode: Press to insert a digit. ● 0 key in predial or editing mode: Press and hold to insert a pause. ● On line: Press the key R/# to make a recall.

12	<p>NAVIGATION KEYS</p> <p> UP</p> <ul style="list-style-type: none"> • In menu mode: Press to scroll up the menu items. • In Phonebook list / Redial list / Call list: Press to scroll up the list. • In editing mode: Press to move the cursor one character to the right. • During a call or TAM message playback: Press to increase the volume. <p> REPEAT / OGM</p> <ul style="list-style-type: none"> • In Idle mode: Press and hold 2 sec until beep to record OGM. • Press  to stop the recording. • In TAM message playback mode: Press to go back to previous message. <p> MEMO / SKIP FORWARD</p> <ul style="list-style-type: none"> • In Idle mode: Press and hold 2 sec until beep to record a memo and press  to stop the recording. • In TAM message playback mode: Press to skip to next message. <p> DOWN / REDIAL LIST</p> <ul style="list-style-type: none"> • In Idle mode: Press to access the redial list. • In menu mode: Press to scroll down the menu items. • In Phonebook list / Redial list / Call list view mode: Press to scroll down the list. • In editing mode: Press to move the cursor one character to the left. • During a call or TAM message playback: Press to decrease the volume.
13	<p> PLAY / STOP</p> <ul style="list-style-type: none"> • In Idle mode: Press to playback messages. • During TAM message playback: Press to stop playing messages.
14	<p> SLOW</p> <ul style="list-style-type: none"> • During TAM MSG playback: Press to playback messages in slow speed.
15	<p> DELETE</p> <ul style="list-style-type: none"> • In TAM message playback mode: Press to delete the current TAM message playback. • In idle mode: Press and hold to delete all old messages.
16	<p> ANS ON / OFF</p> <ul style="list-style-type: none"> • In Idle: Press to switch the answering machine ON or OFF. • The cassette tape icon is displayed on the screen if activate.


3.2 Overview of the handset



17	EARPIECE
18	LCD DISPLAY
19	 CHARGE LIGHT <ul style="list-style-type: none"> Steadily on when the handset is charging in the charger.
20	 MENU / OK <ul style="list-style-type: none"> In idle mode: Press to access the main menu. In sub-menu mode: Press to confirm the selection. During a call: Press to access Intercom/ Phonebook / Redial list /Call log/Record call.
21	 UP / CALL LIST <ul style="list-style-type: none"> In idle mode: Press to access the redial list. In menu mode: Press to scroll up the menu items. In phonebook list / redial list / call list: Press to scroll up the list. In editing mode: Press to move the cursor one character to the right. During a call: Press to increase the listening volume. During ringing: Press to increase the ringer volume.

22	 TALK ON / SPEAKERPHONE <ul style="list-style-type: none"> ● In idle/pre-dial mode: Press to make a call in earpiece mode. ● In phonebook/redial list /call list: Press to make a call to the selected entry in the list in earpiece mode. ● During ringing: Press to answer a call in earpiece mode. ● On line: Press again to pass in speakerphone mode. Press again to switch to earpiece mode.
23	 DOWN / PHONEBOOK <ul style="list-style-type: none"> ● In idle mode: Press to access the phonebook. ● In menu mode: Press to scroll down the menu items. ● In phonebook list / redial list / call list: Press to scroll down the list. ● In editing mode: Press to move the cursor one character to the left. ● During a call: Press to decrease the listening volume. ● During ringing: Press to decrease the ringer volume.
24	MICROPHONE
25	 VOLUME BOOST / SOS <ul style="list-style-type: none"> ● During a call: Press to activate/deactivate the VOLUME BOOST function. ● In idle mode: Press and hold for 3 seconds to enter the emergency calling sequence set in your handset. ● In SOS mode: press and hold for 2 seconds to stop the emergency call.
26	 TONE <ul style="list-style-type: none"> ● During a call: Press this key to increase the high frequency or the low frequencies.
27	 CANCEL / MUTE <ul style="list-style-type: none"> ● In main menu mode: Press to go back to idle screen. ● In sub-menu mode: Press to go back to previous menu. ● In editing/pre-dial mode: Press to delete a character / digit. ● In editing/pre-dial mode: Press and hold to delete all the characters / digits. ● During a call: Press to mute/resume the microphone. ● In idle mode: Press to intercom another handset.
28	 TALK OFF <ul style="list-style-type: none"> ● During a call: Press to end a call and go back to idle screen. ● In menu / editing mode: Press to go back to idle screen. ● During ringing: Press to silence the handset ringer.
29	ALPHANUMERIC KEYPAD, STAR (*), 0, and HASH/RECALL (#_R) <ul style="list-style-type: none"> ● In predial or editing mode: Press to insert a digit / character * and #_R. ● During a call: Press and hold #_R to make a Flash (Recall). ● 0 key in idle / pre-dial mode / number editing mode: Press and hold to insert a pause.

3.3 Overview of the Handset Charger

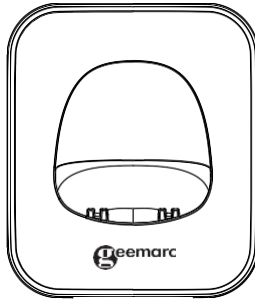












①

1. CHARGING CRADLE

3.4 Handset LCD Display Icons and Symbols

The screen display gives you information on the current status of the telephone.



	Steadily on when the handset is within range of the base. Flashes when the handset is out of range of the base or cannot communicate with the base.
	Steadily on when an intercom call is in progress. Flashes when there is an incoming internal call or an internal call is put on hold.
	Steadily on when a call is in progress. Flashes when there is an incoming call.
	Steadily on when the speakerphone is turned on.
	Steadily on when the battery is fully charged. Animates when battery is charging.
	Flashes when low battery is detected to indicate that it needs charging.
	Steadily on when the telephone answering machine (TAM) is turned on. Flashes when a new message is received in the answering machine.
	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Steadily on when the ringer is switched off.
	Steadily on when one alarm is activated
	Steadily on when you receive a new call or the contact is in the VIP list

3.5 Base corded Menu Structure

In idle mode, pressing **MENU/OK** will access the menu. Refer to the following for the menu structure.

Key Press **MENU/OK**

Main Menu	CALL LOG	PHOTO MEM	PHONEBOOK	CALL BLOCK	INTERCOM	DATE & TIME	TEXT LANG
Sub menu	Review Call list Under a call list entry: DETAILS ADD TO PB ADD TO BL ADD TO PM DELETE DELETE ALL	M1 M2 M3 M4	ALL SPEED DIAL VIP Review Phonebook list Under a selected Phonebook entry: ADD EDIT DELETE DELETE ALL ADD VIP ADD TO PM ADD TO SD STATUS	BLACK LIST SETTINGS BLOCK MODE W/O NUM	HANDSET 1 HANDSET 2 HANDSET x ALL	DATE FORM TIME FORM SET DATE	ENGLISH FRANCAIS DEUTSCH ITALIANO NEDERLAND ESPANOL PORTUGUES

BS SETTING	PAGE ALL HS	REGISTER	SET SOS	REMINDER	TLK DIGITS	ANS. SYS
RING SETUP KEY TONE FLASH TIME FIRST RING DEFAULT			SOS NUMBER SOS MSG SOS LANG	ALARME 1 TO 10 Under one alarm ON/OFF MELODY RENAME VOICE MEMO		PLAYBACK DEL OLD MEMO TAM ON/OFF SET TAM TAM LANGUAGE CALLSCREEN TAM MSG ANSWER DELAY RECORD TIME REMOTE ACC. CHANGE PIN MSG ALERT

3.6 Handset Menu Structure


In idle mode, pressing **MENU/OK** will access the menu. Refer to the following for the menu structure.








Main Menu	CALL LOG	PHOTO MEM	PHONEBOOK	CALL BLOCK	INTERCOM	BS SETTING	HS SETTING
Sub menu	Review Call list Under a call list entry: DETAILS ADD TO PB ADD TO BL ADD TO PM DELETE DELETE ALL	M1 M2 M3 M4	ALL SPEED DIAL VIP Review Phonebook list Under a selected Phonebook entry: ADD EDIT DELETE DELETE ALL ADD VIP ADD TO PM ADD TO SD STATUS	BLACK LIST SETTINGS BLOCK MODE W/O NUM	HANDSET 1 HANDSET 2 HANDSET x ALL	BS RINGER RING VOL FLASH TIME FIRST RING DEFAULT	RING SETUP TONE SETUP TEXT LANG DATE & TIME REGISTER DEFAULT

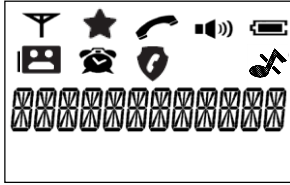SET SOS	REMINDER	TLK DIGITS	ANS. SYS
SOS NUMBER	ALARME 1 TO 10	ON/OFF	PLAYBACK
SOS MSG	Under one alarm		DEL OLD
SOS LANG	ON/OFF MELODY RENAME VOICE MEMO		MEMO TAM ON/OFF SET TAM TAM LANGUAGE CALLSCREEN TAM MSG ANSWER DELAY RECORD TIME REMOTE ACC. CHANGE PIN MSG ALERT

3.7 Base LCD Display

The screen display gives you information on the current status of the telephone.



	This will display when a VIP contact calls you
	Indicate a call is in progress.
	Indicate that speakerphone is being used.
	Steadily on when the telephone answering machine (TAM) is turned on. Flashes when a new message is received in the
	Indicate that the ringer is switched off.
AM PM	Indicate the time format.
	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Steadily on when one alarm is activated

3.8 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook or renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by ▲/▼ to amend the text entry.
3. Press **CANCEL/MUTE** (☒) on the handset, or **Int/☒/C** on the telephone base, to delete the last character.
4. Press and hold **CANCEL/MUTE** (☒) on the handset, or **Int/☒/C** on the telephone base, to delete the entire text string.

3.8.1 English Character Set



Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date / time editing)
	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
Key press											
1	1	.	-	'	()	*	#	&		1
2	a	b	c	A	B	C	2				2
3	d	e	f	D	E	F	3				3
4	G	h	i	G	H	I	4				4
5	J	k	l	J	K	L	5				5
6	m	n	o	M	N	O	6				6
7	p	q	r	s	P	Q	R	S	7		7
8	t	u	v	T	U	V	8				8
9	w	x	y	z	W	X	Y	Z	9		9
0	espace	0									0, P (Pause)
*											*
#											#

4. USE YOUR PHONE


4.1 Make an External Call

4.1.1 Preparatory Dialing

Using a handset:


Enter the phone number and press  to dial the number. Press  to clear the entry.

Using the base:

Enter the phone number and lift the corded handset or press **SPEAKER**  to dial the number. Press **Int/☒/C** to clear the entry when entering the number.

4.1.2 Direct Dialing

Using a handset:



Press  to take the line, and then enter the phone number.

Using the base:



Lift the corded handset or press **SPEAKER**  to take the line and enter the phone number.

4.1.3 Call from the Phonebook

Using a handset:





1. Press  to access the phonebook list and press **▲/▼** to select the desired phonebook entry.
2. Press  to dial the selected entry. Press it again to turn on the speakerphone.

Using the base:

Press  **PHONEBOOK** to access the phonebook and press **▲/▼** to select the desired phonebook entry. Lift the corded handset or press **SPEAKER**  to dial out to the selected phonebook entry.

4.1.4 Call from the incoming Call List

Using a handset:




1. Press  to enter the main menu.
2. Press  to enter in call log list
3. Press  to select the desired call list entry.
4. Press  to dial the selected call list entry. Press it again to turn on the speakerphone.

Using the base:




Press  **CALLS** to access the call list and press  to select the desired call list entry. Lift the corded handset or press **SPEAKER**  to dial out to the selected call list entry.

4.1.5 Call from the Redial List

Using a handset:

1. Press  to access the redial list.
2. Press  to select the desired redial number.
3. Press  to dial the selected redial number. Press it again to turn on the speakerphone.

Using the base:

1. Press  to access the redial list
2. Press  to select the desired redial number.
3. Lift the corded handset or press **SPEAKER**  to dial out to the selected redial number.

4.1.6 Call Timer


Your handset or base automatically times the duration of each call. The call timer will display a few seconds after the call has ended. It is shown in hours, minutes and seconds format (HH:MM: SS)

4.2 Make a Call from Direct Access Memory

Using the base:

In idle mode, press any direct memory key in which a number is stored, the phone will automatically dial out the telephone number stored in the selected memory key in speakerphone mode.

OR

Lift the corded handset or press **SPEAKER** ) and then press any direct memory key in which a number is stored to dial the number pre-stored into the keys respectively.



NOTES:

- You need to set the direct access number first. See **Section 7.1** for details.
- If no number is stored, you will hear beeps.

4.3 Answer a Call


Using a handset:

If the handset is not on the charging cradle:

When the phone rings, press  ) to answer a call. Press it again to turn on the speakerphone.

If the handset is on the charging cradle: When the phone rings, pick up the handset to answer a call.

Using the base:


When there is an incoming ring, pick up the corded handset or press **SPEAKER** ) to answer the call.

4.4 Volume Boost Function


The Volume Boost function allows you to amplify the handset earpiece volume to compensate for the ear's limited sensitivity.

Using a handset:

To turn on the Volume Boost function:

- Press  at any time during a call. "BOOST ON" displays on the handset screen.
- When the Volume Boost function is activated, press ▲/▼ to increase or decrease the earpiece volume.



To turn off the Volume Boost function and return the earpiece volume back to normal:

- Press  again and the handset top indicator will turn off.

NOTE:

The audio boost feature will be turned off automatically when the call is ended.

Using the base:

During a call, you can activate the Volume Boost function with the volume of earpiece increased by several dBs by pressing , "BOOSTER ON" displays on the base screen. To cancel it, press  again.

4.5 End a Call

Using a handset:

During a call, press  to end the call.


OR

Put the cordless handset on the charging cradle to end the call.

Using the base:

During a call, put the corded handset on the base station to end the call.

OR

Press **SPEAKER**  if you have a call in speakerphone mode.

4.6 Adjust Earpiece and Speakerphone Volume

There are 6 levels (VOLUME 1 to VOLUME 6) to choose from for each of earpiece and 7 levels for speakerphone volume of the base.

Using a handset: During a call:

Press ▲/▼ to select **volume 1-6** or **7**. The current setting is shown. When you end the call, the setting will remain at the last selected level.



Using the base: During a call:

Press ▲/▼ to select **volume 1-6**. The current setting is shown. When you end the call, the settings will remain at the last selected level.

4.7 Mute a Call

With the call muted, you can talk to someone nearby without letting the caller hear you during a call.

Using a handset: During a call:


Press  **CANCEL/MUTE** to mute the microphone and "MUTE ON" will be displayed on the handset screen. Your caller cannot hear you. Press  **CANCEL/MUTE** again to resume the microphone.

Using the base: During a call:

Press **Int/☒/C** to mute the microphone and "MUTE ON" is displayed on the LCD. Your caller cannot hear you. Press **Int/☒/C** again to resume the microphone.

4.8 Modify the tonality during a call

Using a handset: During a call:

Press  to increase the high, low frequencies or come back in normal response.

Using the base: During a call:

Press **M4 TONE** to increase the high, low frequencies or come back in normal response.

4.9 Emergency Call without Main Power

The corded base unit can make an emergency call with the corded handset when the mains AC power is disconnected.

Pick up the corded handset and wait for several seconds to get the dial tone and then enter the phone number to make a call.

REMARK:

It is not possible to dial numbers from memories when the mains power is off.

When the mains power is off, you can also answer an incoming call with the corded handset.





When the phone rings, pick up the corded handset to talk to the caller.

4.10 Redial the Last Number

You can redial up to 10 of the last numbers called on the cordless handset or on the corded telephone base. If you have stored a name in the phonebook to match with the number, the name will be displayed instead. The most recently dialed number will be displayed at the top of the redial list.

4.10.1 Redial a Number from the Redial List




Using a handset:

1. In idle mode, press  to access the redial list.
2. Press  to browse the redial list.
3. Press   to dial the selected redial number.

NOTE:

If there is no number in the redial list, the display will show "EMPTY".

Using the base:





1. In idle mode, press  to view the redial list.
2. Press  to browse the redial list.
3. Pick up the corded handset or press **SPEAKER**  to dial to the selected redial number.

NOTE:

If there are no numbers in the redial list, the display will show "EMPTY".

4.10.2 Store a Redial Number into the Phonebook

Using a handset:




1. Follow Steps 1 and 2 in section 4.10.1.
2. Press  and ▲/▼ to select **ADD TO PB**.
3. Press  and check the redial number
4. Press  and enter the name.
5. Press  to confirm.

Using the base:

1. Follow Steps 1 and 2 in section 4.10.1.
2. Press **MENU/OK** and ▲/▼ to select **ADD TO PB?**
3. Press **MENU/OK** and check the redial number.
4. Press **MENU/OK** and enter the name.
5. Press **MENU/OK** to confirm.

4.10.3 Delete a Redial Number

Using a handset:





1. Follow Steps 1 and 2 in section 4.10.1.
2. Press  and ▲/▼ to select **DELETE**.
3. Press  to confirm and CONFIRM? Is displayed.
4. Press  to confirm

Using the base:


1. Follow Steps 1 and 2 in section 4.10.1.
2. Press **MENU/OK** and ▲/▼ to select **DELETE**
3. Press **MENU/OK** to confirm and CONFIRM? is displayed.
4. Press **MENU/OK** to reconfirm.

4.10.4 Delete the Entire Redial List

Using a handset:

1. Follow Steps 1 and 2 in section 4.10.1.
2. Press  and  to select **DELETE ALL**.
3. Press  to confirm and CONFIRM? Is displayed.
4. Press  to reconfirm.

Using the base:


1. Follow Steps 1 and 2 in section 4.10.1
2. Press **MENU/OK** and  to select **DELETE ALL?**
3. Press **MENU/OK** to confirm and CONFIRM? Is displayed.
4. Press **MENU/OK** to reconfirm.





4.11 Find the Handset

Using the base:

This feature helps you find the misplaced handset(s).

You can locate the handset by operation on the base station as below.

1. In idle mode, press **MENU/OK** and  to select **PAGE ALL HS**.
2. Press **MENU/OK** to confirm. "PAGING" will flash on the base screen.

All the handsets registered to the base will produce the paging tone, and "PAGING" will flash on the screen. You can stop the paging by pressing  /  /  /  **CANCEL/MUTE** on any handset or **Int/ⓧ/C** on the base to stop paging.

NOTE:




If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.12 Make an Internal Call




This feature allows you to make internal calls, transfer external calls and make conference calls. If the called base or handset is not answered within 60 seconds, the called base or handset will stop ringing and the calling one will return to standby mode.

4.12.1 Intercom


Using a handset:

1. In idle mode, press  and the numbers of the registered handsets and telephone base will display except the calling handset.
2. Choose the desired handset or base number you want to intercom with and press .
3. The called handset rings. Press  on the called handset or **SPEAKER key** on the base to establish the internal call.

Using the corded base:



1. In idle mode, press *Int*//*C* and  to select the handset you want to call.
2. Press **MENU/OK** to confirm.
3. The called handset rings. Press  on the called handset to establish the internal call.

NOTE:

If only one cordless handset is registered to the base station, press *Int*//*C* will call the cordless handset immediately.

4.12.2 Call All Handsets

Using a handset:






1. In idle mode, press  and  to select **ALL**.
2. Press  to confirm.

Using the corded base:



1. In idle mode, press *Int*//*C* and  to select **ALL**.
2. Press **MENU/OK** to confirm.

4.12.3 Transfer an External Call

Using a handset: During an external call:

1. Press **MENU/OK** and ▲/▼ to select **INTERCOM**.
2. Press  and select the desired handset you want to intercom with and press .
3. The external call is put on hold automatically and the called handset rings.
4. Press   on the called handset to establish an internal call.
5. Press  on the calling handset or put the calling handset on the charging cradle or base station to end the current call with the external party.
6. The external call is transferred to the called handset.


Using the corded base: During an external call:

1. Press **MENU/OK** and ▲/▼ to select **INTERCOM**
2. Press **MENU/OK** and choose the desired handset you want to intercom with, then press **MENU/OK**.
3. The external call is put on hold automatically and the called handset rings.
4. Press   on the called handset to establish an internal call.
5. Hang up the corded handset on the calling base to end the internal call.
6. The external call is transferred to the called handset.

4.12.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with the corded base and cordless handset or two cordless handsets. The three parties can share the conversation and no network subscription is required.

During the external call:

1. Follow Steps 1 to 4 in section 4.12.3.
2. Press and hold  on the calling handset to establish the conference call.

NOTE:

Any party (corded base or cordless handset) hangs up during a conference call will leave the other party still in connection with the external call.

5. PHONEBOOK








Your phone can store up to 50 private phonebooks in the cordless handset and the telephone base with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringer tones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1 Add a New Phonebook Entry

Using a handset: In idle:

1. Press  to display the first phonebook entry in alphabetical order.



OR

1. Press  **MENU/OK** and  to select **PHONEBOOK**
2. Press 2 times  to access the phonebook list.
3. Press  to select **ADD**.
4. Press  and enter the number.
5. Press  and enter the name.
6. Press  to store the phonebook entry.

Using the base: In idle:


1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and  to select **PHONEBOOK** main menu item
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **MENU/OK** and  to select **ADD**.
4. Press **MENU/OK** and enter the number.
5. Press **MENU/OK** and enter the name.
6. Press **MENU/OK** to store the phonebook entry.

5.2 Search for a Phonebook Entry

Using a handset or the base: In idle:









1. Enter the phonebook list in press the key .
2. Enter the first character of your desired name of the phonebook entries by multi-tap.

5.3 View a Phonebook Entry

Using a handset: In idle:

1. Press  to display the first phonebook entry in alphabetical order.


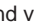
OR

1. Press  **MENU/OK** and  to select **PHONEBOOK**
2. Press  2 times to access the phonebook list.
3. Press  to select the desired phonebook entry.
4. Press  and  to select **VIEW**.
5. Press  and  to browse the name, number of the selected phonebook entry.

Using the base: In idle:

1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and  to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press  to select and view the desired phonebook entry.

OR












Enter the first character of your desired name of the phonebook entry by multi-tap.

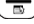5.4 Edit a Phonebook Entry

Using a handset: In idle:

1. Press  to display the first phonebook entry in alphabetical order.


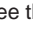

OR

1. Press  **MENU/OK** and  to select **PHONEBOOK**
2. Press  2 times to access the phonebook list.
3. Press  to select the desired phonebook entry.
4. Press  and  to select **EDIT**.
5. Edit the number with the key  and press .
6. Edit the name with the key  and press .
7. Press  to confirm the setting.

Using the base: In idle:






1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

1. Press **MENU/OK** and  to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Scroll  until you see the contact you want to edit.
4. Press **MENU/OK** and  to select **EDIT**.
5. Edit the number with the key **Int/☒/C** and press **MENU/OK**.
6. Edit the name with the key **Int/☒/C** and press **MENU/OK**.
7. Press **MENU/OK** to confirm the setting.

5.5 Delete a Phonebook Entry

Using a handset: In idle:






1. Press  MENU/OK and ▲/▼ to select **PHONEBOOK**
2. Press  2 times to access the phonebook list.
3. Press ▲/▼ to select the desired phonebook entry.
4. Press  and ▲/▼ to select **DELETE**.
5. Press  and the display shows **CONFIRM?**
6. Press  to confirm.

Using the base: In idle:

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Scroll ▲/▼ until you see the contact you want to delete.
4. Press **MENU/OK** and ▲/▼ to select **DELETE**.
5. Press **MENU/OK** and the display shows “**CONFIRM?**”.
6. Press **MENU/OK** to confirm or **Int/☒/Ⓒ** to cancel.

5.6 Delete the Entire Private Phonebook

Using a handset: In idle:

1. Press  MENU/OK and ▲/▼ to select **PHONEBOOK**
2. Press  2 times to access the phonebook list.
3. Press  and ▲/▼ to select **DELELE ALL**.
4. Press  and the display shows **CONFIRM?**.
5. Press  to confirm.






Using the base: In idle:

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **MENU/OK** and ▲/▼ button to select **DELETE ALL**.
4. Press **MENU/OK** and the display shows “**CONFIRM?**”.
5. Press **MENU/OK** to confirm or **Int/☒/Ⓒ** to cancel.

5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

Using a handset:

1. Press  **MENU/OK** and **▲/▼** to select **PHONEBOOK**
2. Press  2 times to access the phonebook list.
3. Press  and **▲/▼** to select **STATUS**.
4. Press  to confirm. The display shows "XX/50" (XX refer to the number of phonebook entries).
5. Press  to exit

Using the base: In idle:

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** 2 times to access the phonebook list
3. Press **MENU/OK** and **▲/▼** to select **STATUS**.
4. Press **MENU/OK**. The display shows "XX/50 USED" (XX refer to the number of phonebook entries).
5. Press **Int/☒/C** to exit

5.8 Set the Fast Dial Numbers

After setting the fast dial numbers, you can dial to the pre-set numbers by pressing the respective digit keys from idle mode.

5.8.1 Add or Edit the Fast Dial Number

Using a handset:

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK**
2. Press **MENU/OK** and **▲/▼** to select **SPEED DIAL**.
3. Press **MENU/OK** and **▲/▼** to select from **KEY 2** to **KEY 9**.

If there is no number stored in the selected key:

4. Press **MENU/OK** and **▲/▼** to select **ADD**.
5. Press **MENU/OK** and enter the Number.
6. Press **MENU/OK** and enter the name
7. Press **MENU/OK** to save

Or if there is already a number stored in the selected key:

4. Press **MENU/OK** to select **EDIT**.
5. Press **MENU/OK** to edit the number
6. Press **MENU/OK** to edit the name.
7. Press **MENU/OK** to confirm.

Using the base: In idle:

1. Press **MENU/OK** and **▲/▼** to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** and **▲/▼** to select **SPEED DIAL**
3. Press **MENU/OK** and **▲/▼** to select from **KEY 2** to **KEY 9**.

If there is no number stored in the selected key:

4. Press **MENU/OK** and **▲/▼** to select **ADD**.
5. Press **MENU/OK** and enter the Number.
6. Press **MENU/OK** and enter the name
7. Press **MENU/OK** to save



Or if there is already a number stored in the selected key:

4. Press **MENU/OK** and **▲/▼** to select **EDIT**.
5. Press **MENU/OK** to edit the number
6. Press **MENU/OK** to edit the name.
7. Press **MENU/OK** to confirm.

5.8.2 View a fast dial number

You have the possibility to check the fast dial information in follow the procedure

Using a handset:




1. Follow steps from 1 to 3 in section 5.8.1
2. Press  and ▲/▼ to select **VIEW**.
3. Press  to exit

Using the base:

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** to select **VIEW**.
3. Press **Int/☒/C** to exit

5.8.3 Delete the Fast Dial Number

Using a handset:




1. Follow steps from 1 to 3 in section 5.8.1
2. Press  and ▲/▼ to select **DELETE**.
3. Press  and the display shows “**CONFIRM?**”.
4. Press  to confirm.

Using the base:

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** and ▲/▼ to select **DELETE**.
3. Press **MENU/OK** and the display shows “**CONFIRM?**”.
4. Press **MENU/OK** to confirm

5.8.4 Delete all the Fast Dial Number

Using a handset:

1. Follow steps from 1 to 3 in section 5.8.1
2. Press  and ▲/▼ to select **DELETE ALL**.
3. Press  and the display shows “**CONFIRM?**”.
4. Press  to confirm.

Using the base:



1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** and ▲/▼ to select **DELETE ALL**.
3. Press **MENU/OK** and the display shows “**CONFIRM?**”.
4. Press **MENU/OK** to confirm

5.9 VIP Numbers

You have the possibility to do a VIP phonebook with 50 numbers to have a quick access.

5.9.1 Record a VIP number

Using a handset:






1. Follow steps from 1 to 3 in section 5.4
2. Press  and ▲/▼ to select **ADD VIP**.
3. Press  to save

Using the base: In idle:


1. Follow steps from 1 to 3 in section 5.4
2. Press **MENU/OK** and ▲/▼ to select **ADD VIP**
3. Press **MENU/OK** to confirm.

5.9.2 Use a VIP number

Using a handset:







1. Press  **MENU/OK** and ▲/▼ to select **PHONEBOOK**
2. Press  and ▲/▼ to select **VIP**.
3. Press  and ▲ ▼ to choose the desired VIP entry.
4. Press   to dial the selected redial number. Press it again to turn on the speakerphone.

Using the base: In idle:

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** and ▲/▼ to select **VIP**
3. Press **MENU/OK** and ▲/▼ to choose the desired VIP entry
4. Lift the corded handset or press **SPEAKER**  to dial out to the selected redial number.

5.9.3 Delete one or all VIP number

Using a handset:





1. Press  **MENU/OK** and ▲/▼ to select **PHONEBOOK**
2. Press  and ▲/▼ to select **VIP**.
3. Press  and ▲/▼ to choose the desired VIP entry.
4. Press  and ▲/▼ to select **DELETE** or **DELETE ALL**.
5. Press  and the display shows “**CONFIRM?**”.
6. Press  to confirm.

Using the base: In idle:

1. Press **MENU/OK** and ▲/▼ to select **PHONEBOOK**
2. Press **MENU/OK** and ▲ ▼ to select **VIP**.
3. Press **MENU/OK** and ▲/▼ to choose the desired VIP entry.
4. Press **MENU/OK** and ▲/▼ to select **DELETE** or **DELETE ALL**.
5. Press **MENU/OK** and the display shows “**CONFIRM?**”.
6. Press **MENU/OK** to confirm





5.9.4 Record VIP number in Photo memory

Using a handset:

1. Press  **MENU/OK** and ▲/▼ to select **PHONEBOOK**
2. Press  and ▲/▼ to select **VIP**.
3. Press  and ▲/▼ to choose the desired VIP entry.
4. Press  and ▲/▼ to select **ADD TO PM**

5. Press  to confirm.









Using the base: In idle:

1. Press **MENU/OK** and  to select **PHONEBOOK**
2. Press **MENU/OK** and  to select **VIP**.
3. Press **MENU/OK** and  to choose the desired VIP entry.
4. Press **MENU/OK** and  to select **ADD TO PM**
5. Press **MENU/OK** to confirm




5.9.5 Check the VIP Usage

You can check how many VIP entries have been occupied in your phone and how many VIP entries are available for you to store in the VIP list

Using a handset:

1. Press  and  to select **PHONEBOOK**
2. Press  and  to select **VIP**.
3. Press  and  to select **STATUS**.
4. Press  to confirm. The display shows “XX/50” (XX refer to the number of phonebook entries).
5. Press  to exit

Using the base: In idle:

1. Press **MENU/OK** and  to select **PHONEBOOK** main menu item.
2. Press **MENU/OK** and  to select **VIP**.
3. Press **MENU/OK** and  to select **STATUS**
4. Press **MENU/OK**. The display shows “XX/50 USED” (XX refer to the number of phonebook entries).
5. Press **Int/ⓧ/C** to exit

6. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 20 received calls on the cordless handset and the telephone base with date/time information in the call list. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed with the number. The phone will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will be displayed.



If the call is an international call or with unknown number, "OUT OF AREA" will be displayed.

In standby, if three unanswered calls are received, "3 CALLS" will be displayed.

6.1 View the Call List

All unanswered calls are saved in calls log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with ★ icon.

Using a handset:

1. Press  and ▲/▼ to select **CALL LOG**.
2. Press  and ▲/▼ to see the desired call list entry.

Using the base:

1. Press  **CALLS** to access the call list.





OR

1. Press **MENU/OK** and ▲/▼ to select **CALL LOG**.
2. Press **MENU/OK** and ▲/▼ to see the desired call list entry.

6.2 Details on the call list number

In check the details, you could see the date and hour of the call

Using a handset:






1. Follow Section 6.1 to access the call list.
2. Press  and ▲/▼ to select **DETAILS**.
3. Press , you could see the date, hour and name of the contact
4. Press , you could see the name and the contact phone number.
5. Press  to confirm

Using the base:


1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** and ▲/▼ to select **DETAILS**
3. Press **MENU/OK**, you could see the date, hour and name of the contact
4. Press **MENU/OK**, you could see the name and the contact phone number.
5. Press **MENU/OK** to confirm.

6.3 Store a Call List Number into the Phonebook

Using a handset:






1. Follow Section 6.1 to access the call list.
2. Press  and ▲/▼ to select **ADD TO PB**.
3. Press  and check the phone number.
4. Press  and the name will be displayed.
5. Edit the name if necessary. Use the key  to delete a number.
6. Press  to confirm.

Using the base:


1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** to select **ADD TO PB?**
3. Press **MENU/OK** and check the phone number.
4. Press **MENU/OK** and the name will be displayed.
5. Edit the name if necessary. Use the key **INT/MUTE/CLEAR**  to delete a character.
6. Press **MENU/OK** to confirm.

6.4 Store a Call List Number into the Black list

Using a handset:




1. Follow Section 6.1 to access the call list.
2. Press  and ▲/▼ to select **ADD TO BL**.
3. Press  and check the phone number.
4. Press  and the name will be displayed.
5. Edit the name if necessary. Use the key  to delete a number.
6. Press  to confirm. The display shows OK

Using the base:

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** to select **ADD TO BL**
3. Press **MENU/OK** and check the phone number.
4. Press **MENU/OK** and the name will be displayed.
5. Edit the name if necessary. Use the key **INT/MUTE/CLEAR**  to delete a character.
6. Press **MENU/OK** to confirm. The display shows OK

6.5 Store a Call List Number into a Photo memory

Using a handset:




1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK**  and ▲/▼ to select **ADD TO PM**.
3. Press **MENU/OK**  and ▲/▼ to select the Photo memory.
4. Press  to confirm.

Using the base:

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** and ▲/▼ to select **ADD TO PM**
3. Press **MENU/OK** and ▲/▼ to select the Photo memory
4. Press **MENU/OK** to confirm.

6.6 Delete an or all Entry in the Call List

Using a handset:

1. Follow Section 6.1 to access the call list.
2. Press  and ▲/▼ to select **DELETE** or **DELETE ALL**.
3. Press  and the display shows "**CONFIRM?**".
4. Press  to confirm.

Using the base:

1. Follow Section 6.1 to access the call list.
2. Press **MENU/OK** and then ▲/▼ to select **DELETE** or **DELETE ALL**.
3. Press **MENU/OK** and the display shows "**CONFIRM?**".
4. Press **MENU/OK** to reconfirm.

7. DIRECT MEMORY KEYS

There are three photo speed dial memory keys **1**, **2**, and **3** and 1 speed dial memory key **M4** on the right side of the telephone base for you to store frequent use numbers.







After a number is stored in any of these memory keys, you can simply press once on one of these memory keys to dial out to the number stored in it directly.

7.1 Record or EDIT direct memory keys

On Base:

1. Press **MENU/OK**, and **▼/▲** to select **PHOTO MEM.**
2. Press **MENU/OK**, and **▼/▲** to select **M1** to **M4**.
3. Press **MENU/OK** and **▼/▲** to select **ADD** or **EDIT** and **VOICE TAG**.
4. Press **MENU/OK** then enter number.
5. Press **MENU/OK** then enter name.
6. Press **MENU/OK** to save.

On handset:


1. Press , and **▼/▲** to select **PHOTO MEM.**
2. Press , and **▼/▲** to select **M1** to **M4**.
3. Press  and **▼/▲** to select **ADD** or **EDIT** and **VOICE TAG**.
4. Press  then enter number.
5. Press  then enter name.
6. Press  to save.

7.2 Record a voice tag

You have the option to enter a voice name in choose **VOICE TAG** and **RECORD** at the point 3 of the section 7.1

If you receive a call with the number registered with a voice tag, you can hear the voice name on the base and on the handset.

NOTES:






- To use a picture big button memory in idle mode, press the picture on the base.
- If you want to pass the call from the speakerphone to the handset, lift the handset off the base to take the call.
- If the handset is not placed on the base, press  to take the line in speakerphone mode and place the handset on the base.

7.3 Listen or delete a voice tag

If you wish listen or delete a voice tag, choose the function **VOICE TAG** and **PLAY** or **DELETE** from point 3 of the section 7.1 and validate your choose.

7.4 Delete a direct memory key

On handset:

1. Press , and ▼/▲ to select **PHOTO MEM.**
2. Press , and ▼/▲ to select **M1 to M4.**
3. Press , and ▼/▲ to select **DELETE.**
4. Press , and the display shows “CONFIRM?”.
5. Press  to confirm.

On Base:

1. Press **MENU/OK**, and ▼/▲ to select **PHOTO MEM.**
2. Press **MENU/OK**, and ▼/▲ to select **M1 to M4.**
3. Press **MENU/OK** and ▼/▲ to select **DELETE.**
4. Press **MENU/OK** and the display shows “CONFIRM?”.
5. Press **MENU/OK** to confirm.



7.5 Set the Memory Keys

Using the base:

To insert a photo:

You can insert a desired photo into the compartment of the three photo speed dial memory keys **1**, **2**, and **3**, or write the contact name on the photo speed dial card.

1. Crop your desired photo to the size as indicated below.
2. Put the cropped photo into the photo speed dial compartment. Then flip down the photo speed dial compartment cover.

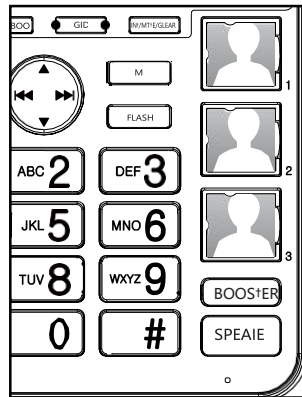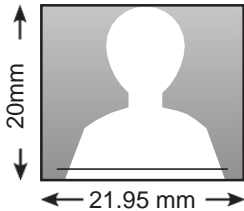







8. BLACK LIST FUNCTION

This feature allows you to block calls from the numbers you have entered.

You have the option to put up to 100 contacts and choose whether you reject all calls, all calls except the VIP contact list, all private or unknown numbers.

8.1 Record or Edit a black list number

Using a handset: In idle:

1. Press  and ▲/▼ to select **CALL BLOCK**
2. Press  and ▲/▼ to select **BLACK LIST**
3. Press  to select **ADD** or **EDIT**.
4. Press  and enter the number.
5. Press  and enter the name.
6. Press  to store the phonebook entry.





Using the base: In idle:

1. Press **MENU/OK** and ▲/▼ to select **CALL BLOCK**
2. Press **MENU/OK** and ▲/▼ to select **BLACK LIST**
3. Press **MENU/OK** and ▲/▼ to select **ADD** or **EDIT**.
4. Press **MENU/OK** and enter the number.
5. Press **MENU/OK** and enter the name.
6. Press **MENU/OK** to store the phonebook entry.

8.2 Check or edit the information of the phone number blocked

With this function, you have the possibility to check the black list number

Using a handset: In idle:





1. Follow steps from 1 to 2 in section 8.1
2. Press  and ▲/▼ to see the desired blocked phone number
3. Press  and ▲/▼ to select **VIEW**.
4. Press  to see the name and the phone number
5. Press  to exit

On Base:

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** and ▲/▼ to choose the desired blocked phone number.
3. Press **MENU/OK** and ▲/▼ to select **EDIT**.
4. Press **MENU/OK** and edit the number with the key **Int/☒/C**
5. Press **MENU/OK** and edit the name with the key **Int/☒/C**
6. Press **MENU/OK** to store

8.3 Delete an or all black list number

Using a handset: In idle:

1. Follow steps from 1 to 2 in section 8.1
2. Press  and ▲/▼ to choose the desired blocked phone number
3. Press  and ▲/▼ to select **DELETE** or **DELETE ALL**.
4. Press  and the display shows "**CONFIRM?**".
5. Press  to confirm.







On Base:

1. Follow steps from 1 to 3 in section 5.8.1
2. Press **MENU/OK** and **▲/▼** to choose the desired blocked phone number.
3. Press **MENU/OK** and **▲/▼** to select **DELETE** or **DELETE ALL**.
4. Press **MENU/OK** and the display shows "CONFIRM?".
5. Press **MENU/OK** to confirm.


8.4 Activation of the black list function

You have the possibility to block all the incoming calls, authorized only the VIP numbers or to stop the function.

Using a handset: In idle:

1. Press , and **▼/▲** to select **CALL BLOCK**.
2. Press , and **▼/▲** to select **SETTINGS**
3. Press  and **▼/▲** to select **BLOCK MODE**
4. Press  and choose the type of blocking **OFF**, **BLOCK ALL** or **ALLOW VIP**
5. Press  to confirm your choose and the display shows the icon 





On Base:

1. Press **MENU/OK**, and **▼/▲** to select **CALL BLOCK**.
2. Press **MENU/OK**, and **▼/▲** to select **SETTINGS**.
3. Press **MENU/OK** and **▼/▲** to select **BLOCK MODE**
4. Press **MENU/OK** and choose the type of blocking **OFF**, **BLOCK ALL** or **ALLOW VIP**.
5. Press **MENU/OK** to confirm your choose and the display shows the icon 
5. Press **MENU/OK** to save.

8.5 Activation of the function for the Private or Unavailable numbers

You have the possibility to block the private or unavailable numbers only.

Using a handset: In idle:

1. Follow steps from 1 to 2 in section 8.4
2. Press  and **▲/▼** to select **W/O NUMBER** .
3. Press  and choose the type of blocking **PRIVATE** or **UNAVAILABLE**
4. Press  and **▲/▼** to select **BLOCK**
5. Press  to confirm.

On Base:

1. Follow steps from 1 to 2 in section 8.4
2. Press **MENU/OK** and **▲/▼** to select **W/O NUMBER**.
3. Press **MENU/OK** and choose the type of blocking **PRIVATE** or **UNAVAILABLE**
4. Press **MENU/OK** and **▲/▼** to select **BLOCK**.
5. Press **MENU/OK** to confirm.

9. INTERCOM FUNCTION

Please refer at the chapter 4.12 for different transfer modes

10. DATE AND HOUR SETTING

You will need to set the correct date and time so that you know when you received answering machine messages or an incoming call.

The date & Hour is automatically setting when you receive a call if you have subscribed at the service CID, else follow the procedures

Using the base:

10.1 Set the Date Format

1. Press **MENU/OK** and **▲/▼** to select **DATE & TIME**.
2. Press **MENU/OK** to show **DATE FORM**.
3. Press **MENU/OK** and **▲/▼** to select your desired date format (**DD--MM--YY** or **MM--DD--YY**).
4. Press **MENU/OK** to confirm.

10.2 Set the Time Format

1. Press **MENU/OK** and **▲/▼** to select **DATE & TIME**.
2. Press **MENU/OK** and **▲/▼** to select **TIME FORM**.
3. Press **MENU/OK** and **▲/▼** to select your desired time format (**12 HR** or **24 HR**).
4. Press **☐** to confirm.

10.3 Set the Time

1. Press **MENU/OK** and **▲/▼** to select **DATE & TIME**.
2. Press **MENU/OK** and **▲/▼** to select **SET DATE**.
3. Press **MENU/OK** and enter the date information with the keypad
4. Press **MENU/OK** and enter the time information with the keypad
5. Press **MENU/OK** to confirm.

NOTE:

If time has been set before, the current time will display, otherwise, "HH--MM" will be displayed.

11. TEXT LANGUAGE SETTING

This information is asked you at the first start of your phone.

You have the choose among 7 languages (English, French, German, Dutch, Spain, Portuguese and Italian)

If you want change of language, please follow these instructions

Using a handset: In idle:

1. Press **☐**, and **▼/▲** to select **HS SETTING**.
2. Press **☐**, and **▼/▲** to select **TEXT LANG**
3. Press **☐** and **▼/▲** to choose your desired text language
4. Press **☐** to confirm

On Base:





1. Press **MENU/OK**, and **▼/▲** to select **TEXT LANG**.
2. Press **MENU/OK**, and **▼/▲** to choose your desired text language.
3. Press **MENU/OK** to save.

12. PHONE SETTING

12.1 Base Settings using the Handset





12.1.1 Set the Ringer Melody

You can set special melody to personalize your base external ringer. A total of 5 melodies are provided for your selection.



1. Press  and ▲/▼ to select **BS SETTINGS**.
2. Press  and ▲/▼ to select **BS RINGER**.
3. Press  and ▲/▼ to select the desired ringer melody.
4. Press  to confirm.

12.1.2 Set the Ringer Volume

You can set the base ringer volume level. A total of 6 ringer volume levels including **VOLUME OFF** are provided for your selection.





1. Press  and ▲/▼ to select **BS SETTINGS**.
2. Press  and ▲/▼ to select **RING VOLUME**.
3. Press  and ▲/▼ to select the desired volume level.
4. Press  to confirm.

NOTE:

The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected,  icon will  play.





12.1.3 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press  and ▲/▼ to select **BS SETTINGS**.
2. Press  and ▲/▼ to select **FLASH TIME**.
3. Press  and ▲/▼ to select your desired flash time (**SHORT**=100ms, **MEDIUM**=300ms, **LONG**=600ms).
4. Press  to confirm.

12.1.4 First ring function

Sometimes, our phone rings one time to inform that we have any voice message on the line. To remove this ringer, you must activate the function.

1. Press  and ▼/▲ to select **BS SETTING**.
2. Press  and ▼/▲ to select **FIRST RING**.
3. Press  and select **ON**.
4. Press  to confirm.

12.2 Base Settings using the Base

12.2.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your base internal ringer. A total of 5 melodies are provided for your selection.

1. Press **MENU/OK** and **▲/▼** to select **SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **RING SETUP**.
3. Press **MENU/OK** and **▲/▼** to select **INT. RING**.
4. Press **MENU/OK** and the display will show **MELODY**.
5. Press **MENU/OK** and **▲/▼** to select the desired ringer melody for internal calls.
6. Press **MENU/OK** to confirm.

NOTE:

The respective ringer melody will be played during your selection.

12.2.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your base external ringer. A total of 5 melodies are provided for your selection.


1. Press **MENU/OK** and **▲/▼** to select **SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **RING SETUP**.
3. Press **MENU/OK** and **▲/▼** to select **EXT. RING**.
4. Press **MENU/OK** and the display will show **MELODY**.
5. Press **MENU/OK** and **▲/▼** to select the desired ringer melody for external calls.
6. Press **MENU/OK** to confirm.

12.2.3 Set the Ringer Volume

You can adjust the volume level of the ringer for internal call (INT RING) and external call (EXT RING) separately, with settings from 1 (the quietest) to 5 (loudest), or set it to **VOLUME OFF**.

1. Follow steps from 1 to 2 in section 12.2.1.
2. Press **MENU/OK** and **▲/▼** to select **RING VOLUME**.
3. Press **MENU/OK** and **▲/▼** to select the desired volume level list.
4. Press **MENU/OK** to confirm.

NOTE:

The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected,  icon will display.

12.2.4 Set the Key Tone

The key tone is a confirmation beep when you press any key. It is set on by default, but can be turned off, if desired.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **KEY TONE**.
3. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF**.
4. Press **MENU/OK** to confirm.

12.2.5 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **FLASH TIME**.
5. Press **MENU/OK** and **▲/▼** to select the desired flash time (**SHORT**=100ms, **MEDIUM**=300ms, **LONG**=600ms).
3. **MEDIUM**=300ms, **LONG**=600ms).
4. Press **MENU/OK** to confirm.

12.2.6 First ring function

Sometimes, our phone rings one time to inform that we have any voice message on the line. To remove this ringer, you must activate the function.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **FIRST RING**.
3. Press **MENU/OK** and **▲/▼** to select **ON** or **OFF**.
4. Press **MENU/OK** to confirm.

12.2.7 Reset Your Base


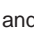

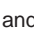




You can reset all of your base settings to their default settings. After a reset, all your personal base settings, call list entries, redial list entries and answering messages will be deleted.

1. Press **MENU/OK** and **▲/▼** to select **BS SETTINGS**.
2. Press **MENU/OK** and **▲/▼** to select **BS DEFAULT**.
3. Press **MENU/OK** and **▲/▼** to select **DEFAULT**.
4. Press **MENU/OK** and the display shows "CONFIRM?".
5. Press **MENU/OK** to confirm.

12.3 Handset Settings

12.3.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your internal ringer. A total of 10 melodies are provided for your selection.

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **RING SETUP**.
3. Press  and  to select **INT RING**.
4. Press  and  to select the desired ringer melody for setting ringer melody for internal calls.


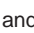

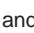

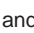


NOTE:

The respective ringer melody will be played while you are browsing the melody list.

5. Press  to confirm.

12.3.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your external ringer. A total of 10 melodies are provided for your selection.

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **RING SETUP**.
3. Press  and  to select **EXT RING**.
4. Press  and  to select the desired ringer melody for setting ringer melody for external calls.









NOTE:

The respective ringer melody will be played while you are browsing the melody list.



5. Press  to confirm.

12.3.3 Set the Ringer Volume

You can set the ringer volume level. A total of 6 ringer volume levels including VOLUME OFF are provided for your selection.









1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **RING SETUP**.
3. Press  and  to select **RING VOL**.
4. Press  and  to select the desired ringer volume.

NOTE:

- The respective ringer volume will be played during your selection.
 - If OFF is selected,  will be displayed on the handset screen.
5. Press  to confirm.








12.3.4 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **TONE SETUP**.
3. Press  and  to select **KEY TONE/ BATT TONE/ RANGE TONE**.
4. Press  to select **ON or OFF**
5. Press  to confirm.









12.3.5 Set the Handset Language

You can choose the language to be displayed on the handset screen from a total of 7 languages English, Français, Dutch, Italiano, Deutsch, Espanol and Portuguese.









1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **TEXT LANG**.
3. Press  and  to select your desired language.
4. Press  to confirm.

12.3.6 Set the time & hour










12.3.6.1 Set the date format

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **DATE FORM**.
4. Press  to select **DD/MM/YY** or **MM/DD/YY**
5. Press  to confirm.

12.3.6.2 Set the Hour format

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **TIME FORM**.
4. Press  to select **12H** or **24H**
5. Press  to confirm.

12.3.6.3 Set the date & hour






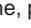
1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DATE & TIME**.
3. Press  and  to select **SET DATE**.
4. Press  and enter the date with the keypad
5. Press  and enter the time with the keypad
6. Press  to confirm.

12.3.7 Registration

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.

If for some reason, the handset is not registered to the base station (Y flashes even when the handset is near the base station), register your handset according to the following procedure.







On the cordless handset:

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **REGISTER**.
3. Press  and the display will show "REGISTRING".
4. At the same time, press **MENU/OK** and  on the base to select **REGISTER**.
5. Press **MENU/OK** to see "REGISTERING" flashing on the base display. After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.
6. Press **INT/MUTE/CLEAR** at any time to cancel.

12.3.8 Reset your handset

You can reset all of your base settings to their default settings. After a reset, all your personal base settings, call list entries, redial list entries and answering messages will be deleted.

The text language will be asking at the start

1. Press  and  to select **HS SETTING**
2. Press  and  to select **DEFAULT** .
3. Press  and the display shows "**CONFIRM?**".
4. Press  to confirm.

13. RESEARCH ONE HANDSET

You can make a research of your handsets in using the function PAGE ALL HS. One time activate, all the handsets will be ring

On Base:

1. Press **MENU/OK** and  to select **PAGE ALL HS**.
2. Press **MENU/OK** to confirm.

14. SOS EMERGENCY FUNCTION









14.1 SOS settings

You need to set the SOS numbers before you can make SOS emergency calls.

On Base:

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS NUMBER**.
3. Press **MENU/OK** and **▼/▲** to select the SOS number to edit (**SOS 1, SOS 2, SOS 3 or SOS 4**).
4. Press **MENU/OK** and select **ADD** to enter a new number or **EDIT** to modify the number stored already.
5. Press **MENU/OK** and enter a phone number or edit the number stored already.
6. Press **MENU/OK** and enter a new name or edit the name stored already.
7. Press **MENU/OK** to confirm or **Int/☒/C** to delete.

On handset:







1. Press , and **▼/▲** to select **SET SOS**.
2. Press , and **▼/▲** to select **SOS NUMBER**.
3. Press , and **▼/▲** to select the SOS number to edit (**SOS 1, SOS 2, SOS 3 or SOS 4**).
4. Press  and select **ADD** to enter a new number or **EDIT** to modify the number stored already.
5. Press  and enter a phone number or edit the number stored already.
6. Press  and enter a new name or edit the name stored already.
7. Press  to confirm or  to delete.

14.2 Delete an or all SOS number

On Base:


1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS NUMBER**.
3. Press **MENU/OK** and **▼/▲** to select the SOS number to delete (**SOS 1, SOS 2, SOS 3 or SOS 4**).
4. Press **MENU/OK** and select **DELETE or DELETE ALL**.
5. Press **MENU/OK** and the display shows “CONFIRM?”.
7. Press **MENU/OK** to confirm.

On handset:


1. Press , and **▼/▲** to select **SET SOS**.
2. Press , and **▼/▲** to select **SOS NUMBER**.
3. Press  and **▼/▲** to select the SOS number to Delete (**SOS 1, SOS 2, SOS 3 or SOS 4**).
4. Press  and select **DELETE or DELETE ALL**.
5. Press  and the display shows “CONFIRM.”.
6. Press  to confirm

14.3 Make SOS emergency calls

On Base

Press and hold **2** seconds  on the base to launch the emergency calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call be will made to the SOS 2 number, and so on. See note.

On handset

Press and hold **3** seconds  on the handset to launch the emergency calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call be will made to the SOS 2 number, and so on. See note.

NOTE:

- The other party receiving the SOS message must press any number on their phone to open the SOS

call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open else the phone stops the call 10 seconds after.

- To stop the procedure launch by error, press and hold the SOS key until the alarm SOS stop.






14.4 Record SOS messages

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.

On Base

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **RECORD**.
4. Press **MENU/OK** to start SOS message recording and “**RECORDING ANNC...**” will be displayed.
5. Press **MENU/OK** to save your SOS message.

On handset:






1. Press , and **▼/▲** to select **SET SOS**.
2. Press , and **▼/▲** to select **SOS MSG**.
3. Press , and **▼/▲** to select **RECORD**.
4. Press  to start SOS message recording and “**RECORDING**” will be displayed.
5. Press  to save your SOS message.

14.5 Play SOS messages

On Base

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **PLAY**.
4. Press **MENU/OK** to start SOS message playback.
5. Press **▶PLAY/■STOP** to stop SOS message playback.

On handset:




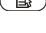
1. Press , and **▼/▲** to select **SET SOS**.
2. Press , and **▼/▲** to select **SOS MSG**.
3. Press , and **▼/▲** to select **PLAY**.
4. Press  to start SOS message playback.
5. Press  or **5** key to stop SOS message playback.

14.6 Delete a SOS messages

On Base

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS MSG**.
3. Press **MENU/OK** and **▼/▲** to select **DELETE**.
4. Press **MENU/OK** to delete your message and come back at the origin announce.

On handset:

1. Press , and **▼/▲** to select **SET SOS**.
2. Press , and **▼/▲** to select **SOS MSG**.
3. Press , and **▼/▲** to select **DELETE**.
4. Press  to delete your message and come back at the origin announce.





14.7 Set the talking language

You can choose the voice prompt language of the answering machine from a total of 4 languages (French, English, Dutch and German).

On Base

1. Press **MENU/OK**, and **▼/▲** to select **SET SOS**.
2. Press **MENU/OK**, and **▼/▲** to select **SOS LANG**.
3. Press **MENU/OK** and **▼/▲** to select your desired vocal language
4. Press **MENU/OK** to confirm.

On handset:



1. Press , and ▼/▲ to select **SET SOS**.
2. Press , and ▼/▲ to select **SOS LANG**.
3. Press , and ▼/▲ to select your desired vocal language.
4. Press  to confirm

15 SETTING AN ALARM

You can use this phone to set an alarm clock. When an alarm is set, the  displays on the screen.

When the alarm time is reached, the  and “ALARM ON” flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm.








NOTES:

- a. Key press is still applicable if handset keypad is locked and when the alarm time is reached.
- b. The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **OFF**, the alarm still sounds at **VOLUME 1** level.
- c. During an external call or an internal call, if an alarm is set and when the alarm time is reached, the  and “ALARM ON” will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold  to disable the alarm, it will revert to the call duration screen.

15.1 Turn on/off the Alarm

You have the choice to enter 10 Alarms.

On handset:





1. Press , and ▼/▲ to select **REMINDER**.
2. Press , and ▼/▲ to select your alarm.
3. Press , and ▼/▲ to select **ON/OFF**.
4. Press  and select **ON**.
5. Press  and enter the time.
6. Press  and choose the frequency (**ONCE/ DAILY/ MON-FRI/SAT-SUN**).
7. Press  to confirm.

On base:





1. Press **MENU/OK**, and ▼/▲ to select **REMINDER**.
2. Press **MENU/OK**, and ▼/▲ to select your alarm.
3. Press **MENU/OK** and ▼/▲ to select **ON/OFF**.
4. Press **MENU/OK** and select **ON**.
5. Press **MENU/OK** and enter the time.
6. Press **MENU/OK** and choose the frequency (**ONCE/ DAILY/ MON-FRI/SAT-SUN**).
7. Press **MENU/OK** to confirm.

15.2 Set the Alarm melody





You have the choice to select 1 of the 10 Melodies.

1. Follow steps from 1 to 2 in section 15.1.
2. Press , and ▼/▲ to select **MELODY**.
3. Press , and ▼/▲ to select your desired alarm melody.
4. Press  and ▼/▲ to select **ON/OFF**.
5. Press  to confirm.



15.3 Rename the name of your Alarm

1. Follow steps from 1 to 2 in section 15.1.
2. Press , and ▼/▲ to select **RENAME**.
3. Press  then  to delete the characters and enter the new name
4. Press  to confirm.

15.4 Record a voice memo for the Alarm

1. Follow steps from 1 to 2 in section 15.1
2. Press , and ▼/▲ to select **VOICE MEMO**.
3. Press  and select **RECORD**.
4. Press  and start your message after the beep.
5. Press  to stop the recording, your message is playing

15.5 Delete or play a voice memo Alarm

1. Follow steps from 1 to 2 in section 15.4.
2. Press , and ▼/▲ to select **DELETE or .PLAY**
3. Press  to delete or play the memo message.

16 TALKING HELP FUNCTION




You have the choose to activate or deactivate the function Talking Digits.

Activate: this function announces the digit dial or the CID number when you receive a call and that you have subscribed to the service.

On Base:

1. Press **MENU/OK**, and ▼/▲ to select **TLK DIGITS**.
2. Press **MENU/OK**, and ▼/▲ to select **ON to OFF**.
3. Press **MENU/OK** to confirm.

On handset:





1. Press , and ▼/▲ to select **TLK DIGITS**.
2. Press , and ▼/▲ to select **ON to OFF**.
3. Press  to confirm.

17 ANSWERING MACHINE

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

17.1 Switching Answering Machine On/Off

Using a handset:

1. Press  and ▲/▼ to select **ANS. SYS**
2. Press  and ▲/▼ to select **TAM ON/OFF**.
3. Press  and ▲/▼ to select **ON** or **OFF**.
4. Press  to confirm.

Using the base direct key:

You can switch on / switch off the TAM function by pressing **ANS ON/OFF**.

Using the base menu:




Alternatively, you can switch the TAM on or off using the base menu.

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS**.
2. Press **MENU/OK** and ▲/▼ to go to **TAM ON/OFF**.
3. Press **MENU/OK** and ▲/▼ to select **ON** or **OFF**.
4. Press **MENU/OK** to confirm.

17.2 Play Messages on TAM

If you have new messages, the display will show e.g. 02/05 MSGS, which means you have 2 new message out of total 5 messages. New messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

Using the handset:

1. Press  and ▲/▼ to select **ANS. SYS.**
2. Press  to show **PLAYBACK.**
3. Press  again to start message playback and the screen displays the date of the message received.
4. During message playback, press ▲/▼ to adjust the message playback volume respectively.


NOTE:

After new message is played, the new message will be saved as an old message automatically unless it is deleted.

5. Press  and ▲/▼ to select **STOP, FORWARD, PREVIOUS, SLOW ON** or **DELETE** to perform the following functions during message playback.
 - **STOP:** Stop the current message playback and return to the ANS. MACHINE menu.
 - **FORWARD:** Skip to play the next message. The date information of the next message will display if there is next message.
 - **SLOW ON:** to reduce the speed of the playback
 - **PREVIOUS:** Skip to repeat playing the current message from the beginning. The date information of the current message will display.
 - **DELETE:** Delete the current message and the next message will be played.
6. Press  to confirm the setting.

NOTE:

Alternatively, you can use the following shortcut keys to control different operation during message playback.

- Press **5** to stop message playback.
- Press **4** to skip to repeat playing the current message from the beginning. Press **4** twice to skip backward to the previous message.
- Press **6** to skip to play next message.
- Press **2** to delete the current message playback.
- Press ▲/▼ to adjust the playback volume.
- Press  to turn the speakerphone on or off.

Using the base direct key:

In idle:

1. Press **PLAY/STOP** to listen to messages and memos.
2. Press **PLAY/STOP** if you want to stop the playback.
3. Press **◀** once if you want to repeat the current message from the beginning, or press twice to skip back to the previous message during message playback.
4. Press **▶** if you want to skip forward to the next message during message playback.
5. Press **DELETE** if you want to delete the current message being played.
6. Press **SLOW** to reduce the speed of the playback

Using the base menu:

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** to show **PLAYBACK.**
3. Press **MENU/OK** to start playing back the messages from speakerphone.

17.3 Delete all Messages on TAM

Using the handset menu:

1. Press **☎** and **▲/▼** to select **ANS. SYS.**
2. Press **☎** and **▲/▼** to select **DEL OLD**
3. Press **☎** and the display shows CONFIRM? .
4. Press **☎** to confirm delete all old messages.

Using the base menu:

1. Press **MENU/OK** and **▲/▼** to select **ANS. SYS.**
2. Press **MENU/OK** and **▲/▼** to select **DEL OLD.**
3. Press **MENU/OK.** and the display shows CONFIRM?
4. Press **MENU/OK** to confirm delete all old messages.

Using the base direct key:

Press and hold **DELETE** to delete all the old messages.





NOTE:

You cannot delete new messages, so you will have to play them before trying to delete.

17.4 Record Memos on TAM

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

Using a handset:

1. Press  and ▲/▼ to select **ANS. SYS.**
2. Press  and ▲/▼ to select **MEMO.**
3. Press  to start memo recording and "RECORDING" will be displayed.
4. Press  to stop memo recording and save the memo.

OR

Press **CANCEL/MUTE**  to stop memo recording without saving and go back to TAM menu.

Using the base:






1. Press **MENU/OK** and ▲/▼ to select **ANS SYS.**
2. Press **MENU/OK** and ▲/▼ to select **MEMO.**
3. Press **MENU/OK** to start recording the memo, and "RECORDING" is shown on the display.
4. Press **MENU/OK** to save and end your memo recording. The new memo will then play back automatically. Let it play to the end or press **MENU/OK** again to stop the playback. Or press **Int/☒/C** at any time to stop the memo without saving it.

17.5 Answering Machine Settings

17.5.1 Set the talking TAM Language

You can choose the voice prompt language of the answering machine from a total of 4 languages. (English, French, Dutch and German)

Using a handset:

1. Press  and ▲/▼ to select **ANS. SYS**
2. Press  and ▲/▼ to select **SET TAM**
3. Press  and ▲/▼ to select **TAM LANG.**
4. Press  and ▲/▼ to select the desired voice prompt language for the answering machine, talking language and SOS message.
5. Press  to confirm






Using the base:

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **TAM LANG.**
4. Press **MENU/OK** and ▲/▼ to select the desired voice prompt language for the answering machine, talking language and SOS message.
5. Press **MENU/OK** to confirm

17.5.2 Turn On or Off the Base Screening

You can select to turn on or off the call screening on base. When the answering machine is set to ON and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answer delay.

Using a handset:

1. Press  and ▲/▼ to select **ANS. SYS.**
2. Press  and ▲/▼ to select **SET TAM.**
3. Press  and ▲/▼ to select **CALLSCREEN.**
4. Press  and ▲/▼ to select **ON** or **OFF.**
5. Press  to confirm.








Using the base:

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **CALLSCREEN.**
4. Press **MENU/OK** and ▲/▼ to select **ON** or **OFF.**
5. Press **MENU/OK** to confirm.

17.5.3 Record your Outgoing Message (OGM)

You can record your own OGM for ANS & REC mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalized OGM is deleted, the pre-set OGM will be restored automatically.

Using a handset:







1. Press  and ▲/▼ to select **ANS. SYS.**
2. Press  and ▲/▼ to select **SET TAM.**
3. Press  and ▲/▼ to select **TAM MSG.**
4. Press  and ▲/▼ to select **RECORD.**
5. Press  to start recording your personalized OGM and "RECORDING" will be displayed on the screen.
6. Press  to stop and save your personalized OGM. Your newly saved OGM will play automatically. Alternatively, press **CANCEL/MUTE**  to return to previous screen without saving the personalized OGM.

Using the base:

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **TAM MSG.**
4. Press **MENU/OK** and ▲/▼ to select **RECORD.**
5. Press **MENU/OK** to start recording your personalized OGM and "RECORDING" is displayed on the screen.
6. Press **MENU/OK** to stop and save your personalized OGM. Your new saved OGM will playback automatically. Alternatively, press **Int/⊗/C** to return to previous screen without saving the personalized OGM.

17.5.4 Playback the Outgoing Message (OGM)

Using a handset:

1. Press  and ▲/▼ to select **ANS. SYS.**
2. Press  and ▲/▼ to select **SET TAM.**
3. Press  and ▲/▼ to select **TAM MSG.**
4. Press  and ▲/▼ to select **PLAY.**
5. Press  to play your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING ANNC" will be displayed on the screen.
6. Press  to stop the OGM playback and return to the previous menu.

NOTE:

If a personalized OGM is not recorded before, the pre-set OGM will be played.

Using the base direct key:

Press  briefly to listen to the current OGM.

Using the base menu:



1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **TAM MSG.**
4. Press **MENU/OK** and ▲/▼ to select **PLAY.**
5. Press **MENU/OK** to playback your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING ANNC" is displayed on the screen.
6. Press **Int/☒/C** to stop the OGM playback and return to the previous menu.

NOTE:

If a personalized OGM is not recorded before, the pre-set OGM will be played.

17.5.5 Delete a Personalized OGM (SET OGM to DEFAULT)

Using a handset:

1. Repeat Steps 1 to 3 in the section 17.5.3.
2. Press  and ▲/▼ to select **DELETE**.
3. Press  to delete your personalized OGM and return to previous menu and the pre-set OGM is restored automatically.

NOTE:

If pre-set OGM is playing, you are not allowed to delete the pre-set OGM.

Using the base:






1. Repeat Steps 1 to 3 in the section 17.5.3.
2. Press **MENU/OK** and ▲/▼ to select **DELETE**.
3. Press **MENU/OK** to confirm.

17.5.6 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to ten rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered - then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.

Using a handset:

1. Press  and ▲/▼ to select **ANS. SYS.**
2. Press  and ▲/▼ to select **SET TAM**
3. Press  and ▲/▼ to select **ANSW DELAY** (Available options: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 RINGS** or **TALL SAVE**).
4. Press  and ▲/▼ to select your desired answer delay.
5. Press  to confirm.










Using the base:

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM**.
3. Press **MENU/OK** and ▲/▼ to select **ANS DELAY**.
4. Scroll **MENU/OK** and ▲/▼ to select the desired answer delay.
5. Press **MENU/OK** to confirm.





17.5.7 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

Using a handset:

1. Press  and  to select **ANS. SYS.**
2. Press  and  to select **SET TAM.**
3. Press  and  to select **REC TIME.**
4. Press  and  to select your desired recording time (Available options: **60S, 120S, 180S, or UNLIMITED**).
5. Press  to confirm.

Using the base:









1. Press **MENU/OK** and  to select **ANS. SYS.**
2. Press **MENU/OK** and  to select **SET TAM.**
3. Press **MENU/OK** and  to select **REC TIME.**
4. Press **MENU/OK** and  to select your desired recording time.
5. Press **MENU/OK** to confirm.

17.5.8 Activate Remote Access




Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent other people from unauthorized access of your answering machine.

17.5.8.1 Change the 4-Digit Remote Access PIN

Using a handset:

1. Press  and  to select **ANS. SYS.**
2. Press  and  to select **SET TAM.**
3. Press  and  to select **CHANGE PIN.**
4. Press  and enter your new code pin
5. Press  to confirm.

Using the base:

1. Press **MENU/OK** and  to select **ANS. SYS.**
2. Press **MENU/OK** and  to select **SET TAM.**
3. Press **MENU/OK** and  to select **CHANGE PIN.**
4. Press **MENU/OK** and enter your new code pin
5. Press **MENU/OK** to confirm.

17.5.8.2 Activate or Deactivate the Remote access

Using a handset:

1. Press **MENU/OK** (☰) and ▲/▼ to select **ANS. SYS.**
2. Press (☰) and ▲/▼ to select **SET TAM.**
3. Press (☰) and ▲/▼ to select **REMOTE ACC.**
4. Press (☰) and ▲/▼ to select **ON** or **OFF** to turn on or off the remote access respectively.
5. Press (☰) to confirm.

Using the base:

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **REMOTE ACC.**
4. Press **MENU/OK** and ▲/▼ to select **ON** or **OFF** to turn on or off the remote access respectively.
5. Press **MENU/OK** to confirm.

17.5.9 Function message alert

When you have a new message, you can hear a beep every 10 seconds.
If you want deactivate this beep, follow the procedure.

Using the handset:

1. Press (☰), and ▼/▲ to select **ANS.SYS.**
2. Press (☰), and ▼/▲ to show **SET TAM.**
3. Press (☰) and ▼/▲ to select **MSG ALERT.**
4. Press (☰) and ▼/▲ to select **OFF.**
5. Press (☰) to confirm.

17.5.10 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

1. Place a call from a tone-dialing phone.
2. When the answering machine answers the call and starts playing OGM, press **X**.
3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
4. Press the following keys to carry out your desired function.

Keys	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5	Play the message	
6		Skip forward to play the next message
7	Turn on the answering machine	
8		Stop the current message playback
9	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

NOTE:

- When your answering machine memory is full and the answer mode is in ANS & RECORD, the answer mode will change to ANSWER ONLY automatically. It will change to ANS & RECORD mode automatically after some messages have been deleted.

18 TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Solutions
My telephone does not work at all.	<ul style="list-style-type: none">• Make sure the battery is installed and charged correctly.• For optimum daily performance, return the handset to the telephone base after use.• Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.• Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.• Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize.• Remove and re-insert the batteries. If that still does not work, it might be necessary to purchase some new batteries.• Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Call your telephone service provider.
Low battery shows on screen.	<ul style="list-style-type: none">• Place the handset in the telephone base for recharging.• Remove and re-install the battery and use it until fully depleted, then recharge the handset in the telephone base.• If the above measures do not solve the problem, replace the battery.
The battery do not charge in the handset or the handset battery do not accept charge.	<ul style="list-style-type: none">• Make sure the handset is placed in the telephone base correctly.• Remove and reinstall the battery, then charge for up to 16 hours.• Purchase a new battery.

There is interference during a telephone conversation. My calls fade out when I am using the handset.



- The handset may be out of range. Move it closer to the telephone base.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference
- Try moving the appliance or telephone base to another outlet.
- Other electronic products may cause interference to your cordless telephone. Install your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.
- The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance.
- Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service.
- Contact your telephone service provider (charges might apply).
- If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service.
- Contact your telephone service provider (charges may apply).

Common cure for electronic equipment.	<p>If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed):</p> <ul style="list-style-type: none">• Disconnect the power to the telephone base.• Disconnect the battery on the handset.• Wait a few minutes before connecting power to the telephone base.• Re-install the battery and place the handset in the telephone base.• Wait for the handset to synchronize with the telephone base.
--	---

This telephone is not equipped with a grounding function! Therefore, some of the functions may be limited when used in PBX systems.

Please contact the technical support of the network provider for further information.

19 TECHNICAL SPECIFICATIONS

Basic Information	
Handset Valid range	Indoor: 50m * Outdoor: 300m *
Handset Operating Time	Standby time: 100Hours approx. ** Talk time: 10Hours approx. **
RF Parameter	
Frequency	1.88GHz to 1.9GHz
Number of Channels	10
RF power	< 250mW
Power Supply	
Base	Input:100-240V 50/60Hz; Output DC6V  0.8A, 4.8W adapter
Handset Charger	Input:100-240V 50/60Hz; Output DC6V  0.45A, 2.7W adapter
Handset	2.4V; 500mAH rechargeable battery pack

* Values may vary according to environment.

** Depending on initial battery charge.

20 CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

- You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

NOTE

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT**

RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN
INCORRECT TYPE.
DISPOSE OF USED BATTERY ACCORDING TO THE
INSTRUCTIONS.**

21 GUARANTEE

From the moment your Geemarc product Ampli DECT Combi 595 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

22 DECLARATIONS:

CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The UKCA declaration of conformity may be consulted at www.geemarc.com

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as hazardous voltage according to EN62368-1 standard). The apparatus does not incorporate an integral power on / off switch. To switch off the apparatus, disconnect the power adaptor.

When installing the apparatus, ensure that the mains power socket is readily accessible.

Telephone connection: Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN62368-1 standard.

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.

Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our website at www.geemarc.com

E-mail : help@geemarc.com telephone **01707 387602**

lines are open 09h00 to 16h00 Mon to Fri

Parc de l'Etoile, 2 Rue Galilée, 59791 Grande-Synthe, France.

Manufacturer: Vtech (Dongguan) Telecommunications Limited.

Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan, Guangdong.

This product is made in China To Geemarc Telecom



UG COMBI DECT595_En_v1.3

Geemarc Telecom FRANCE
2 rue Galilée-
Parc de l'étoile
59791 GRANDE-SYNTHE Cedex
France

E-mail : help@geemarc.com telephone 01707 387602
lines are open 09h00 to 16h00 Mon to Fri